

# Turcon® Varilip® PDR & HiSpin® PDR RT



---

! This page is intentionally left blank.



## ■ Turcon® Varilip® PDR

### ■ Introduction

Turcon® Varilip® PDR rotary shaft seals extend the boundaries imposed by elastomer radial shaft seals by utilizing advanced materials and design techniques to provide the optimum sealing performance for each application. The outcome is a superior sealing solution that retains a compact seal envelope.

These seals can be used to replace standard elastomeric rotary shaft seals which have a limited application range with respect to temperature, surface speed, media compatibility, pressure or a combination of these due to the inherent limitations of many elastomer grades.

Turcon® Varilip® PDR are characterized in particular by the low friction of the Turcon® lip material and their stick-slip-free running, reducing temperature generation and permitting higher surface speeds.

Turcon® has the characteristic of inherent memory, whereby a distorted Turcon® component will attempt to recover to the profile it had during the manufacturing process. This feature is used to help provide the necessary radial loading of the sealing lip onto the shaft, therefore negating the requirement for the energizing spring present in elastomeric seal designs.

Turcon® Varilip® PDR are typically the first choice for challenging application conditions. Characteristically, they can be found in applications such as vacuum pumps, where both chemical compatibility and ever-increasing performance demands create harsh environments for sealing systems. Turcon® Varilip® PDR seals are also used in compressors where the requirements are long life and the ability to cope with intermittent shaft rotation.

Other market segments where Turcon® Varilip® PDR are used include: Chemical process industries, Aerospace, Marine, Motorsport, and Automotive electric drivetrains.

Electrically conductive Turcon® grades are available as special designs for applications where shaft grounding is required to dissipate electrical charge.

Friction optimized versions of Turcon® Varilip® PDR are also available as special designs. This design is particularly suited for high peripheral shaft speed and low lubrication levels (mist or splash).

### ■ General Description

Turcon® Varilip® PDR are constructed from only two parts – a precision manufactured metal body and a mechanically retained Turcon® sealing element. Unlike seals with pressed metal cases, a gasket is not required to provide sealing between the lip and casing. This is provided by the mechanical retention of the lip, thus improving both the chemical resistance and temperature range of the sealing system.

The mechanical retention of the Turcon® element provides a robust product which also eliminates the process of bonding the Turcon® to a metal or elastomer substrate.

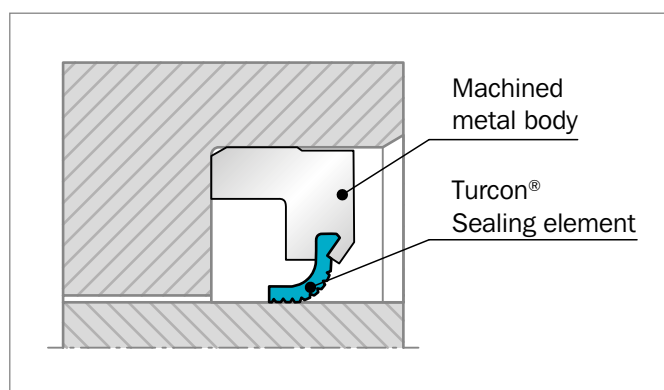


Figure 100: Turcon® Varilip® PDR




Where required, the Turcon® Varilip® PDR is available with a hydrodynamic feature on the Turcon® sealing lip. This provides a positive displacement of the fluid as a result of the shaft rotation to give improved sealing in applications where the shaft only rotates in a single direction. The feature also increases the flexibility of the lip, which allows a wider contact band between the Turcon® lip and the shaft which helps to reduce shaft load and associated friction-related temperature generation.



## Turcon® Varilip® PDR Product Range

Turcon® Varilip® PDR seals are available in five basic design styles, detailed in Table 61.

**Table 61: Seal Configurations**
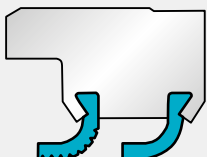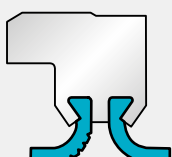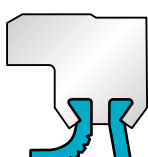
| Seal                                                                                                        | Max. Shaft Speed |        | Max. Pressure |     | Description                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------|------------------|--------|---------------|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                             | m/s              | ft/min | MPa           | psi |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Type A/Type 1</b><br>   | 60               | 11,811 | 0.5           | 73  | <p>This is a single-lipped seal suitable for use in standard industrial applications where an elastomer radial shaft seal would not be able to withstand the temperature, friction, media or poor lubrication conditions.</p>                                                                                                                                                                                                             |
| <b>Type B/Type 3</b><br>  | 40               | 7,874  | 0.5           | 73  | <p>The preferred choice for applications in which high seal integrity is demanded or where contaminated media are to be sealed. This type offers a “back-up” sealing lip to provide secondary sealing.</p> <p>Note: Secondary sealing element material is Turcon® M83 in standard seal configuration.</p>                                                                                                                                 |
| <b>Type C/Type 4</b><br> | 20               | 3,937  | 1.0           | 145 | <p>For use in applications involving higher pressures for which a simple elastomer radial shaft seal can no longer be considered. Due to reinforcement of the sealing lip, pressures up to 1 MPa (145 psi) are possible, e.g. as pump, shaft or rotor seals.</p> <p>Note: Secondary support element material is M83 (not modifiable). Turcon® M83 is the recommended primary lip material.</p>                                            |
| <b>Type D/Type 5</b><br> | 40               | 7,874  | 0.5           | 73  | <p>For use in applications where the seal is subjected to pressure from both sides and/or applications where the separation of two different media using a single seal is required.</p> <p>Note: Secondary sealing element material is Turcon® M83 in standard seal configuration.</p>                                                                                                                                                    |
| <b>Type G/Type 6</b><br> | 60               | 11,811 | 0.5           | 73  | <p>Similar configuration to Type D / Type 5 but has a non-contacting environmental sealing element rather than a full lay-down lip. This provides effective sealing against the ingress of external contaminants into the system whilst also ensuring torque and resulting power consumption are kept to a minimum.</p> <p>Note: Secondary dust/dirt element material is Turcon® T01 in standard seal configuration (not modifiable).</p> |

Note: For shaft diameters from 6 mm to 250 mm, sealing at speeds of up to 90 m/s may be possible with input from Trelleborg Sealing Solutions engineering teams for special designs. Contact your local Customer Solution Center for more information.



## ■ Turcon® Varilip® PDR: Special Designs

Alongside the standard range, Turcon® Varilip® PDR seals are available as special designs to satisfy the demands of specific applications and can therefore accommodate non-standard

housing and shaft sizes. Figure 101 to Figure 106 show some of the special designs available.

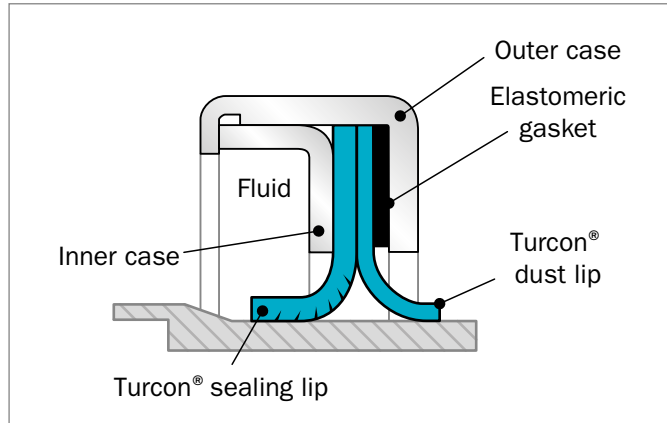


Figure 101: Clamped Design. Suited to high volume applications with excessive housing tolerance.

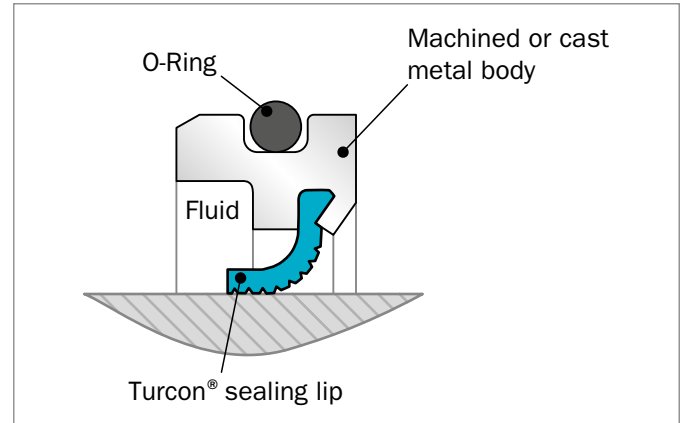


Figure 102: O-Ring Design. For low interference fits in the housing. Housing surface finish  $> 0.8 \mu\text{m Ra}$  or particularly searching media control.

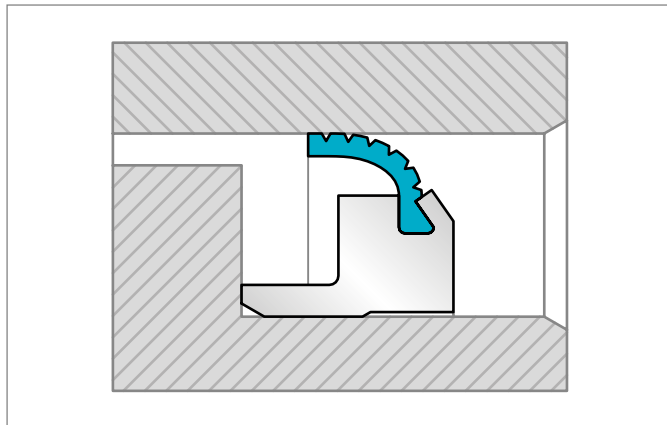


Figure 103: Sealing against the Bore. For applications where the running surface is located on the housing.

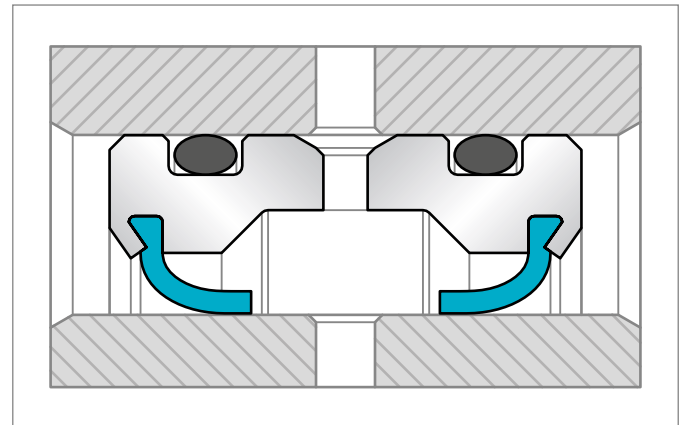


Figure 104: Fluid Transfer. Injection ports enable the transfer of fluid between the housing and the shaft.

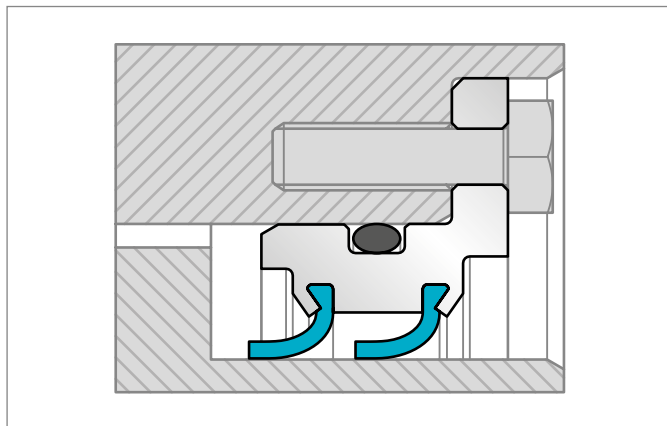


Figure 105: End Plate. Allows for simple assembly/disassembly of the seal.

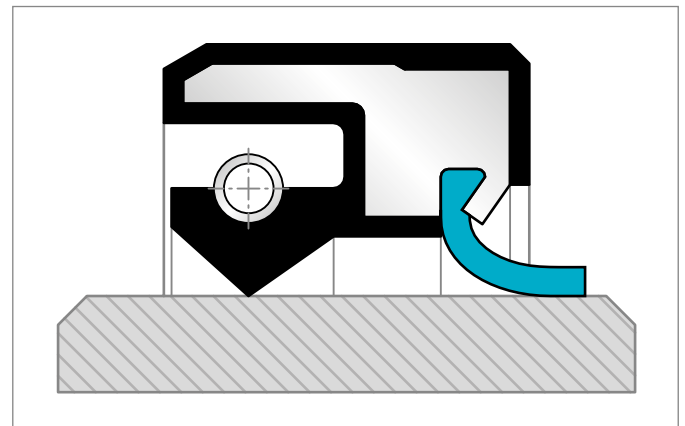


Figure 106: Elastomer/Turcon® Hybrid. This combination utilizes the best attributes of both a Radial Oil Seal and Turcon® Varilip® PDR.



## Materials

### SEALING LIP

An important factor for the proper function of rotary shaft seals is the material used for the sealing lip. For this reason, Trelleborg Sealing Solutions has developed a range of specially modified materials based on proven Turcon® grades. Particular importance is attached to optimization of friction and wear properties, whilst providing excellent sealing performance, even at high surface speeds. Table 62 gives the materials available for use in Turcon® Varilip® PDR seals. Additional compounds have been developed for specific applications which are available on request. Designs with more than one sealing element will use Turcon® M83 as the standard secondary lip material to make use of its superior dry running capabilities.

Adding the “M” material code will override the standard secondary lip material selection and replace it with the selected primary lip material. The dust lip will always be a low abrasion-resistant, virgin PTFE to allow rapid sizing of the lip inner diameter relative to the shaft and provide a close clearance barrier.

#### MATERIAL CODE EXAMPLE:

“T251M” as a material code suffix = Both sealing elements Turcon® T25. See full ordering examples on Page 226, Table 74 and Table 75.

**Table 62: Sealing Element Materials**

| Material Code                                                                                                                                                                                                                                                                                                                            | Standard Material Configuration (Type B, C, D, G) |                      | “M” Material Code | Mating Surface Hardness                                                        |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|----------------------|-------------------|--------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                          | Secondary Lip                                     | Dust Lip             | Secondary Lip     |                                                                                |
| <b>Turcon® T25</b><br>Standard material with exceptional wear and friction characteristics<br>For lubricated running, e.g. oil, grease<br>Glass fiber, lubricant-filled PTFE<br>Color: Gray                                                                                                                                              | M83                                               | T01<br>(Virgin PTFE) | T25               | Min. 55 HRC<br><br>At low pressure and up to 4 m/s (788 ft/min)<br>Min. 45 HRC |
| <b>Turcon® T40</b><br>For all lubricating and non-lubricating fluids, especially water<br>Used for medium hardness shafts in applications where there is risk of shaft wear<br>Carbon fiber filled PTFE<br>Color: Gray                                                                                                                   | M83                                               | T01<br>(Virgin PTFE) | T40               | Min. 55 HRC                                                                    |
| <b>Turcon® T78</b><br>Particularly good running behavior permits the use with dry running or poor lubrication, and in conjunction with soft shaft surfaces e.g. Stainless Steel shafts in food, pharmaceutical and chemical industries. For pressure up to 0.2 MPa (29 psi).<br>Aromatic polymer filled PTFE<br>Color: Tan or dark brown | Not available<br>Must order with “M” designation  | T01<br>(Virgin PTFE) | T78               | Min. 170 HB                                                                    |

Table continues on next page



| Material Code                                                                                                                                                                                                                        | Standard Material Configuration (Type B, C, D, G) |                   | "M" Material Code | Mating Surface Hardness |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|-------------------|-------------------|-------------------------|
|                                                                                                                                                                                                                                      | Secondary Lip                                     | Dust Lip          | Secondary Lip     |                         |
| <b>Turcon® M83</b><br>Specially designed for dry-running applications. Particularly good results in applications for the semiconductor industry. Can also be used lubricated<br>Glass fiber and pigment filled PTFE<br>Color: Yellow | M83                                               | T01 (Virgin PTFE) | N/A               | Min. 60 HRC             |
| <b>Turcon® MF5</b><br>Specially designed for dry-running applications. Can also be used lubricated. For food contact service<br>Glass fiber-filled PTFE<br>Color: White                                                              | Not available<br>Must order with "M" designation  | MF1 (Virgin PTFE) | MF5               | Min. 60 HRC             |
| <b>Turcon® MF6</b><br>Especially suited for low pressure rotary applications and running against soft surfaces. For food contact service<br>PEEK-filled PTFE<br>Color: Tan                                                           | Not available<br>Must order with "M" designation  | MF1 (Virgin PTFE) | MF6               | Min. 170 HB             |

## METAL BODY

Turcon® Varilip® PDR seals are available as standard using the materials shown in Table 63. Other specialised materials are available on request.

**Table 63: Metal Body Materials**

| Code | Material                 |
|------|--------------------------|
| 1    | Stainless Steel 304      |
| 2    | Stainless Steel 316      |
| 3    | Unavailable              |
| 4    | Mild Steel (Zinc Plated) |
| 5    | Aluminum (Industrial)    |



## ■ Technical Data

### SPEED

Figure 107 shows the superior surface speed capability of Turcon® Varilip® PDR compared to elastomeric shaft seals.

The operating speed directly impacts the temperature generated by the seal, which is an important factor when considering the requirements for the sealing system (See Figure 109 and Table 64).

The limiting speed will be dependent upon the temperature, pressure, media, lubrication properties, heat dissipation and shaft condition.

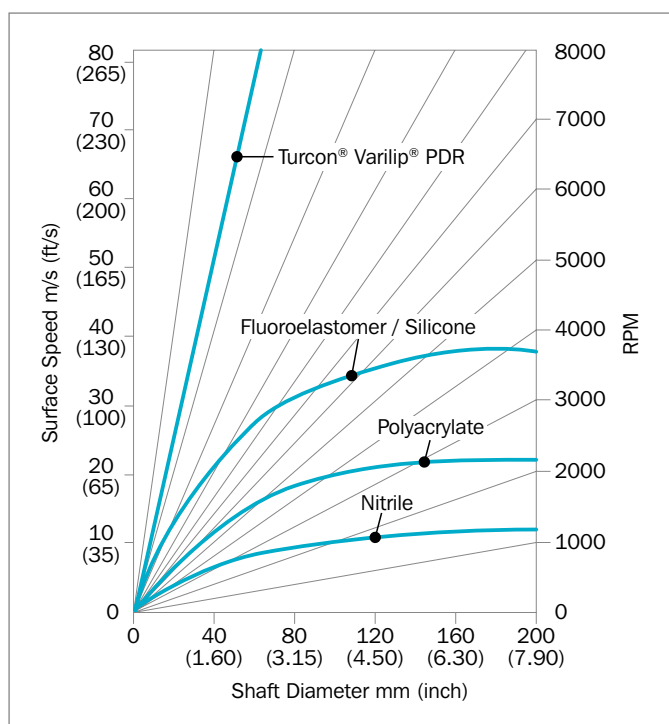


Figure 107: Surface speed as a function of shaft diameter and RPM

**Table 64: General Recommended Maximum Surface Speed**

| Material             | Max. Surface speed |        |
|----------------------|--------------------|--------|
|                      | m/s                | ft/min |
| Turcon® Varilip® PDR | 100                | 19,680 |
| Fluoroelastomer      | 38                 | 7,500  |
| Silicone             | 38                 | 7,500  |
| Polyacrylate         | 22                 | 4,320  |
| Nitrile              | 12                 | 2,340  |

Speed capability depends on application conditions.

### TEMPERATURE

All Turcon® Varilip® PDR are capable of outstanding high and low temperature performance compared to elastomeric materials.

Unlike other PTFE lip seals, Turcon® Varilip® PDR is not limited in its temperature performance by the presence of an elastomer gasket. This gives it excellent temperature range capabilities.

The temperatures in Figure 108 are general working limits of the seal material and in all cases the effective limit for a rotary shaft seal application would be much lower.

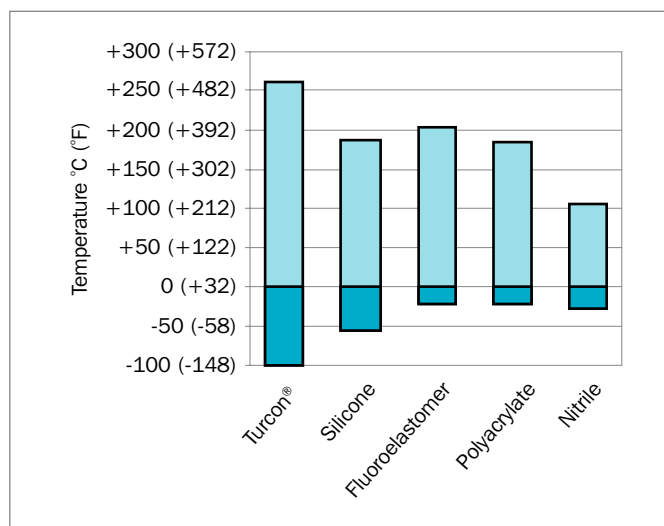


Figure 108: Maximum and minimum temperatures for different materials

**Table 65: General Recommended Temperature Range**

| Material        | Temperature |     |      |     |
|-----------------|-------------|-----|------|-----|
|                 | °C          |     | °F   |     |
|                 | Min         | Max | Min  | Max |
| Filled PTFE     | -100        | 260 | -148 | 500 |
| Silicone        | -54         | 177 | -65  | 350 |
| Fluoroelastomer | -40         | 204 | -40  | 400 |
| Polyacrylate    | -40         | 175 | -40  | 347 |
| Nitrile         | -46         | 107 | -50  | 225 |

(ref. ARPM: OS-4, Fifth Edition: 2017)



## PRESSURE

The double sealing element configuration of the Turcon® Varilip® PDR Type C/Type 4 enables it to effectively seal against pressures of up to 1 MPa (145 psi). All the other standard range designs are capable of handling up to 0.5 MPa (73 psi).

Pressure heavily influences the contact force between the Turcon® sealing element and the shaft, and consequently the heat generation. This must be taken into consideration when selecting the appropriate seal type.

Turcon® Varilip® PDR seals can remain leak tight when exposed to pressurization during static shaft conditions.

## FLUID RESISTANCE

Turcon® Varilip® PDR seals are resistant to mineral acids, bases, common organic fluids and solvents. They are also unaffected by oxidation, ultraviolet radiation or ozone, making them ideally suited for use in the chemical industry and applications requiring exposure to the atmosphere.

A particular benefit of Turcon® Varilip® PDR is a resistance to oil additives and biofuels, which have an adverse effect on many elastomers. Using Turcon® Varilip® PDR allows the increased use of additives and hence a longer oil service life.

Many Turcon® materials have been successfully tested in 20% fluorine gas at temperatures in excess of +250 °C (+482 °F).

## LUBRICATION STARVATION

Turcon® Varilip® PDR shaft seals have the capability to run without lubrication for longer periods of time compared with elastomer radial shaft seals without adversely affecting their ultimate lifespan. This not only allows them to be used in applications where the lubrication may be intermittent as a result of start-up or other operating factors, but also allows their use as effective dirt, dust and powder seals.

### NOTE

Higher speeds and pressure capabilities can be achieved through the use of custom designs. Please consult your local Customer Solution Center.



## POWER CONSUMPTION

One of the key features of Turcon® Varilip® PDR is its low friction, resulting in very low power consumption. Figure 109 shows the running torque for a 40 mm (1.73 inch) shaft diameter Turcon® Varilip® PDR seal.

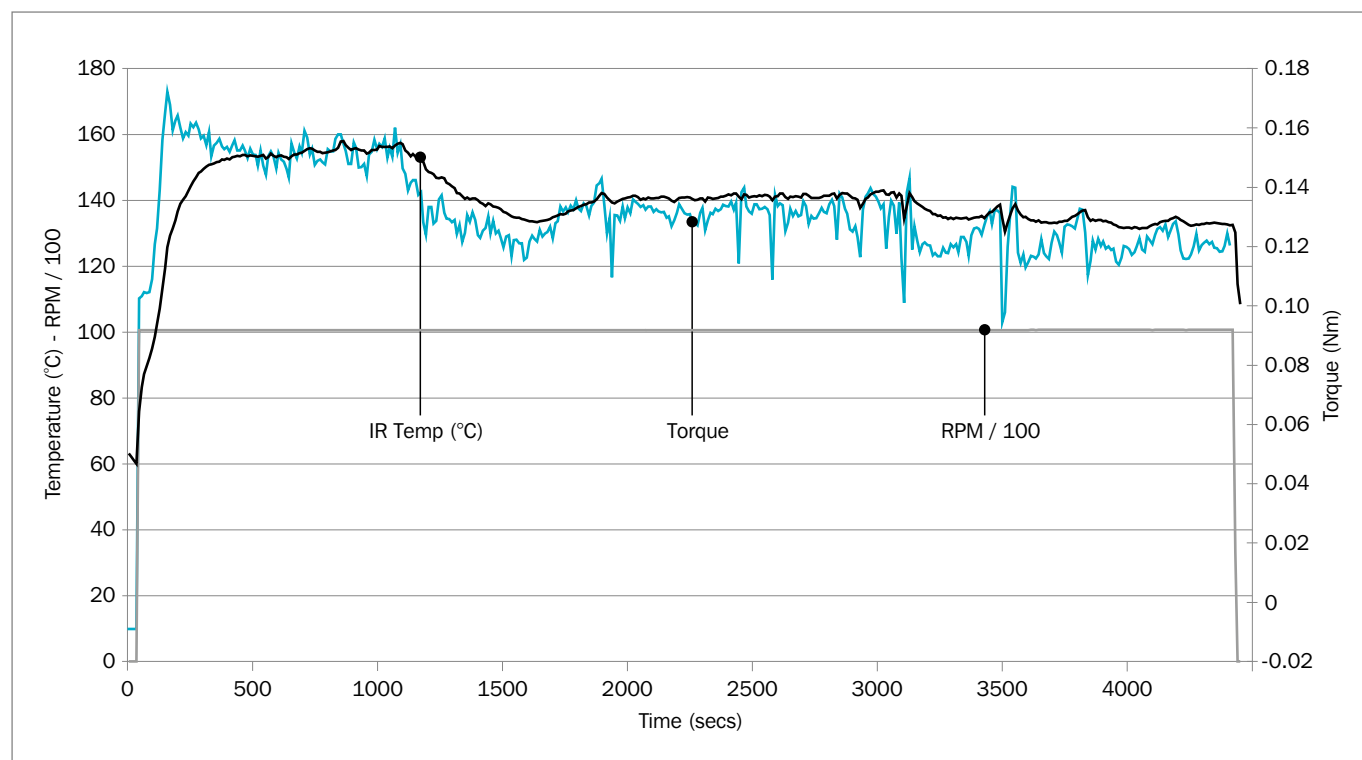


Figure 109: Running torque for Turcon® Varilip® PDR

Reduced torque can be achieved through custom designs but may reduce leak tightness.

### NOTE

Results may vary according to application and conditions.



## ENDURANCE



Turcon® Varilip® PDR rotary shaft seals can provide extended service life compared with elastomer shaft seals. As with any seal however, the life of a Turcon® Varilip® PDR seal is dependent upon the specific operating parameters.

PTFE is an inherently stable material and does not suffer from aging or degradation as with elastomers.

## SEALING PERFORMANCE

The hydrodynamic feature available on Turcon® Varilip® PDR helps to ensure improved leak tightness compared to other PTFE lip seals. Note that seals with hydrodynamic features must be used only in one direction.

Sealing performance may not be optimized until the “running-in” phase, described on page 212, has been completed.

## ECCENTRICITY

The graph in Figure 110 shows the maximum recommended operating envelope for Silicone, Nitrile, Polyacrylate and Fluoroelastomer seals. Turcon® Varilip® PDR seals have a specific lip design to minimize the risk of leakage and reduce wear rates. Therefore, the levels of eccentricity should be kept within the limits shown. In order to achieve a uniform radial load of the sealing lip on the shaft, the best possible coaxiality, or static offset, should be maintained between the housing bore and the shaft, maximum values shown in Figure 111.

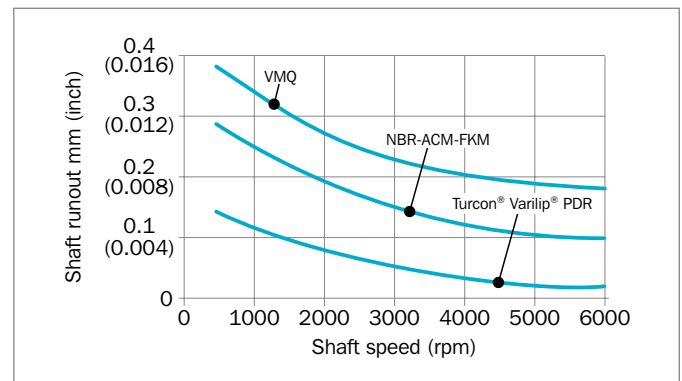


Figure 110: Dynamic eccentricity capability

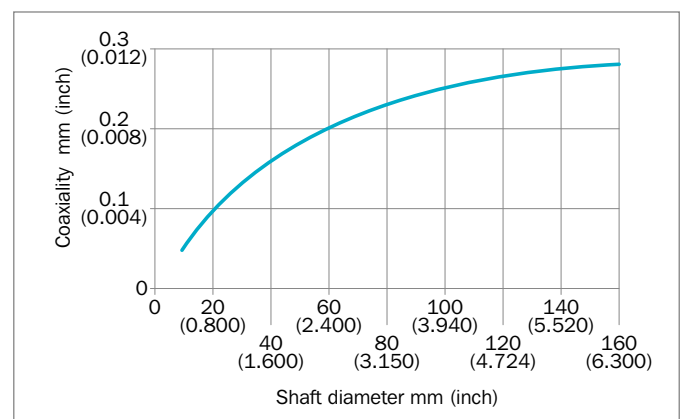


Figure 111: Coaxial tolerance capability

## NOTE

The recommended maximum values for coaxiality and eccentricity will vary depending on the specific application conditions. Excessive misalignment in high speed applications results in degradation of the PTFE matrix and leads to a reduction in seal life.




## HEAT GENERATION CONSIDERATIONS

All Turcon® Varilip® PDR are designed to have a running contact on the shaft surface during operation. The contact force between the sealing lip and the shaft will depend upon the seal design used and the application details, but in all cases a temperature increase due to the presence of the seal can be expected. Where this increase is likely to be significant, consideration should be given to methods of reducing the level of generated heat. This can be achieved through increases in localized cooling, improved lubrication, and efficient heat transfer and dissipation mechanisms.

## SHAFT WEAR

Turcon® Varilip® PDR are designed to contact the shaft surface during operation and a seal contact band will be evident in the majority of applications. With correct seal specification and operating conditions, shaft wear should be limited to a light polishing, but factors such as overpressure, contamination, eccentricity or insufficient shaft hardness can result in more significant wear.

As part of the system design, consideration should be given to the level of shaft wear permissible within a set operating period and therefore the benefits of measures intended to reduce the rate of wear, such as shaft surface coatings, can be analyzed in relation to their additional cost.

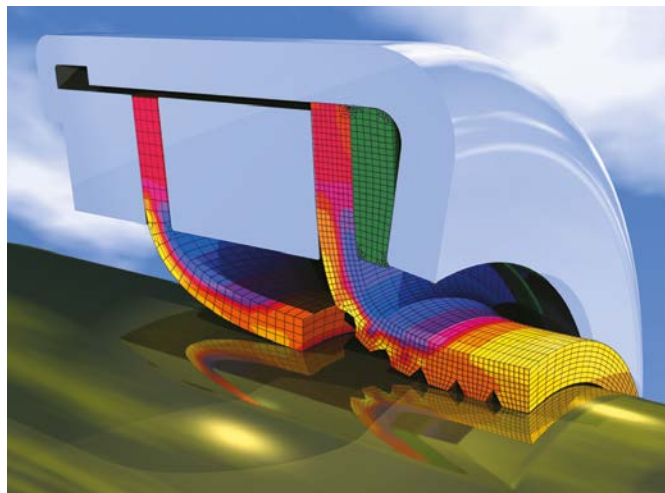



## ■ Design Guidelines

### HOUSING

Turcon® Varilip® PDR are designed to meet global standards, including: ISO 6194/1 and ISO 16589. (See page 216 to page 220).

They require an interference fit with the housing bore to provide both adequate sealing of this interface and to ensure that the seal remains in place when subjected to pressure, axial movement and induced torsion produced by the relative rotary motion of shaft to housing bore. The bore should be machined with a H8 diametric tolerance as reproduced in Table 66 below. System design should also ensure that Turcon® Varilip® PDR are not pushed into bores that may have been previously scored by the assembly of another component, such as a bearing, selecting a larger seal outer diameter if necessary.

The bore should have a surface finish of  $0.8 \mu\text{m}$  ( $32 \mu\text{in}$ )  $R_a$  maximum. In cases where the housing bore is split, resulting in an axial joint crossing the seal outer diameter, and in cases where meeting these surface finish requirements is not possible, it is recommended that a proprietary sealant or adhesive is used.

Alternatively, a custom solution can be prepared employing a rubber covering or O-Ring for outer diameter sealing.

**Table 66: Housing Installation Data Table**

| Housing Bore Diameter |        |      |        | Tolerance (H8) |             |
|-----------------------|--------|------|--------|----------------|-------------|
| Over                  |        | To   |        | (mm)           | (inch)      |
| (mm)                  | (inch) | (mm) | (inch) |                |             |
| 10                    | 0.394  | 18   | 0.787  | +0.027 / -0    | 0.0011 / -0 |
| 18                    | 0.787  | 30   | 1.181  | +0.033 / -0    | 0.0013 / -0 |
| 30                    | 1.181  | 50   | 1.969  | +0.039 / -0    | 0.0015 / -0 |
| 50                    | 1.969  | 80   | 3.150  | +0.046 / -0    | 0.0018 / -0 |
| 80                    | 3.150  | 120  | 4.724  | +0.054 / -0    | 0.0021 / -0 |
| 120                   | 4.724  | 180  | 7.087  | +0.063 / -0    | 0.0025 / -0 |
| 180                   | 7.087  | 250  | 9.843  | +0.072 / -0    | 0.0028 / -0 |
| 250                   | 9.843  | 315  | 12.402 | +0.081 / -0    | 0.0032 / -0 |
| 315                   | 12.402 | 400  | 15.748 | +0.089 / -0    | 0.0035 / -0 |

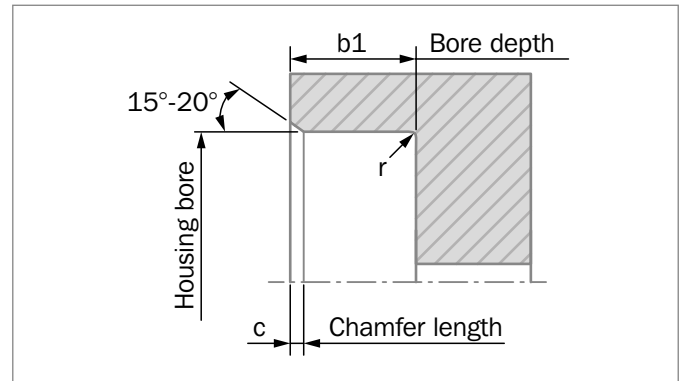


Figure 112: Housing design schematic

**Table 67: Housing Design Data**

| Seal Width           | Up to 10 mm<br>(0.394 inch)           | Over 10 mm<br>(0.394 inch)            |
|----------------------|---------------------------------------|---------------------------------------|
| Min. bore depth (b1) | b + 0.3 (0.0197 in)                   | b + 1.0 (0.0394 in)                   |
| Chamfer length (c)   | 0.70 to 1.00<br>(0.028 in to 0.04 in) | 1.20 to 1.50<br>(0.047 in to 0.06 in) |
| Max. corner rad. (r) | 0.40 (0.0157 in)                      | 0.40 (0.0157 in)                      |

### SHAFT

Shafts should be machined to an h11 tolerance or better (Table 68). The surface finish should be prepared by plunge grinding to avoid any machining leads that may act with the shaft rotation to facilitate leakage.

**Table 68: Shaft Installation Data**

| Shaft Diameter |        |      |        | Tolerance (h11) |               |
|----------------|--------|------|--------|-----------------|---------------|
| Over           |        | To   |        | (mm)            | (inch)        |
| (mm)           | (inch) | (mm) | (inch) |                 |               |
| 6              | 0.236  | 10   | 0.394  | +0 / -0.090     | +0 / - 0.0035 |
| 10             | 0.394  | 18   | 0.787  | +0 / -0.110     | +0 / - 0.0043 |
| 18             | 0.787  | 30   | 1.181  | +0 / -0.130     | +0 / - 0.0051 |
| 30             | 1.181  | 50   | 1.969  | +0 / -0.160     | +0 / - 0.0063 |
| 50             | 1.969  | 80   | 3.15   | +0 / -0.190     | +0 / - 0.0075 |
| 80             | 3.15   | 120  | 4.724  | +0 / -0.220     | +0 / - 0.0087 |
| 120            | 4.724  | 180  | 7.087  | +0 / -0.250     | +0 / - 0.0098 |
| 180            | 7.087  | 250  | 9.843  | +0 / -0.290     | +0 / - 0.0114 |
| 250            | 9.843  | 315  | 12.402 | +0 / -0.320     | +0 / - 0.0126 |
| 315            | 12.402 | 400  | 15.748 | +0 / -0.360     | +0 / - 0.0142 |

Surface finish quality relates directly to dynamic seal performance. Properly defining, measuring and controlling surface finish quality is critical to the functional reliability and service life of a seal.



Developments in surface finish measurement equipment and capabilities, along with finishing methods, have resulted in functional seal testing being performed to determine and verify surface finish recommendations for improved seal performance

## STANDARD SURFACE RECOMMENDATIONS

The recommended surface finishes for Turcon® Varilip® PDR are given below (Table 69 and Table 70). The first is for HVOF (High Velocity Oxygen Fuel) applied coatings like Tungsten Carbide Cobalt-Chrome (WC-Co-Cr). The second is for bare steel or chrome plating.

**Table 69: Surface Finish Recommendations for HVOF Applied Surfaces**

| Measurement | Standard Recommendation                                           |
|-------------|-------------------------------------------------------------------|
| Ra          | < 5 µin / 0.12 µm                                                 |
| Rp          | 8 µin max. / 0.2 µm maximum                                       |
| Rz          | 40 µin / 1.0 µm maximum                                           |
| Rmr         | 70 - 90% @ depth of c = 0.25 Rz relative to a ref. line c = 5% tp |
| Rsk         | -0.1 to -3                                                        |

**Table 70: Surface Finish Recommendations for Chrome Plating, Bare Metal (Hardened) and Others (Non-HVOF)**

| Measurement | Standard Recommendation                                           |
|-------------|-------------------------------------------------------------------|
| Ra          | 8 - 16 µin / 0.2 - 0.4 µm                                         |
| Rp          | 24 µin / 0.6 µm maximum                                           |
| Rz          | 40 µin / 1.0 µm maximum                                           |
| Rmr         | 50 - 75% @ depth of c = 0.25 Rz relative to a ref. line c = 5% tp |
| Rsk         | -0.5 to -1.5                                                      |

A shaft hardness in excess of 55 HRC is generally recommended for Turcon® Varilip® PDR, although lower values are permissible depending upon the pressure, speed and sealing lip material used (refer to materials section).

## PLATINGS AND COATINGS

Seals run well against unplated surfaces at moderate speeds and pressures. In high-speed rotary or high-pressure applications, harder surfaces are preferable.

Titanium shafts should be avoided unless nitrided. Shafts with hard chrome or nickel plating, finished according to the recommendations given in Table 70 are acceptable. Certain ceramic coatings can also be used, although some grades have

been proven to result in aggressive wear of the sealing lip due to their percentage of porosity. Nitride hardening or carburizing of surfaces (finished according to the recommendations given on Table 70) are also acceptable.

It is important to consider the ability of the substrate to support the plating. For example, when a high-pressure load is exerted on a seal running against hard chrome plating supported by a soft substrate, such as 300 series Stainless Steel, the plating may peel or crack and then abrade the seal. A better substrate would be Stainless Steel Type 440C (hardened to 44 Rockwell C) or an alloy steel such as 4340 in the fully-hardened condition. In certain applications, it may not be possible to provide a shaft with the necessary hardness, surface finish and corrosion resistance. Fitting a wear sleeve onto the shaft can solve this problem by providing the local hardness and surface requirements without affecting the main shaft.

If wear should occur, only the sleeve need then be replaced. The surface finish of the sleeve should be as outlined in Table 69 and Table 70. Consideration should be given to providing adequate heat dissipation and effective sealing to the interface between the wear sleeve and the shaft.

## RUNNING IN

In standard rotary shaft systems, the seals and mating surfaces have an initial period of higher wear. This phase, known as the run-in, ends once the peaks on the mating surface are broken off and both surface and seal reach an equilibrium state. Provided the seals are sufficiently lubricated, the wear rate drops significantly once the equilibrium state is reached. By defining the surface finish using multiple surface finish parameters, the overall surface profile can be controlled more precisely. This reduces the sealing system run-in period, and once equilibrium between the seal and sealing surface is reached, gives an improved surface finish for leakage control, wear resistance and service life.

The abrasive nature of a rough finish can cause excessive seal wear during the early run-in period. Therefore, the harder the mating surface, the more important it is to start with the correct surface finish.





## ■ Installation Requirements

When installing Turcon® Varilip® PDR seals, careful handling is important in order to avoid damaging the sealing lip. If the seal is installed directly on to the shaft, lead-in chamfers must be machined on the end of the shaft with no burrs, sharp corners or rough machining marks. The leading diameter should be smaller than the unstressed diameter of the sealing lip, as shown in Figure 113. Table 71 shows guide values for this.

It is recommended that as shallow an angle as practical be adopted within the range given.

**Table 71: Shaft Lead-in Chamfer**  
(Ref. Figure 113 and Figure 114)

| d1        |            | d1 - d3 |        |
|-----------|------------|---------|--------|
| (mm)      | (inch)     | (mm)    | (inch) |
| < 10      | 0.4        | 1.5     | 0.06   |
| 10 - 20   | 0.4 - 0.8  | 2.0     | 0.08   |
| 20 - 30   | 0.8 - 1.2  | 2.5     | 0.10   |
| 30 - 40   | 1.2 - 1.6  | 3.0     | 0.12   |
| 40 - 50   | 1.6 - 2.0  | 3.5     | 0.14   |
| 50 - 70   | 2.0 - 2.8  | 4.0     | 0.16   |
| 70 - 95   | 2.8 - 3.7  | 4.5     | 0.18   |
| 95 - 130  | 3.7 - 5.1  | 5.5     | 0.22   |
| 130 - 240 | 5.1 - 9.4  | 7.0     | 0.28   |
| 240 - 300 | 9.4 - 11.8 | 11.0    | 0.43   |

It is preferable to use an installation cone, as shown in Figure 114, where the seal can be fitted onto the cone before being located on the shaft to ensure correct orientation of the sealing lip.

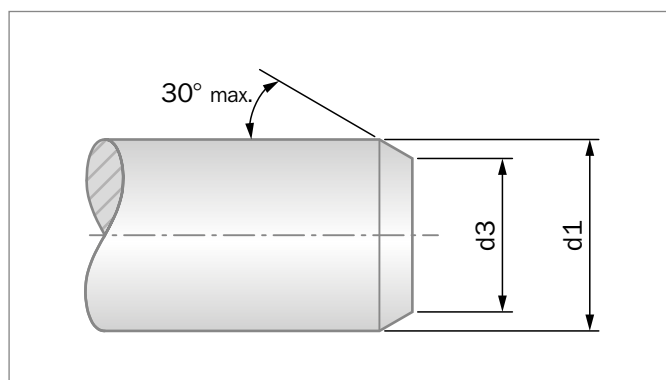


Figure 113: Shaft lead-in chamfer

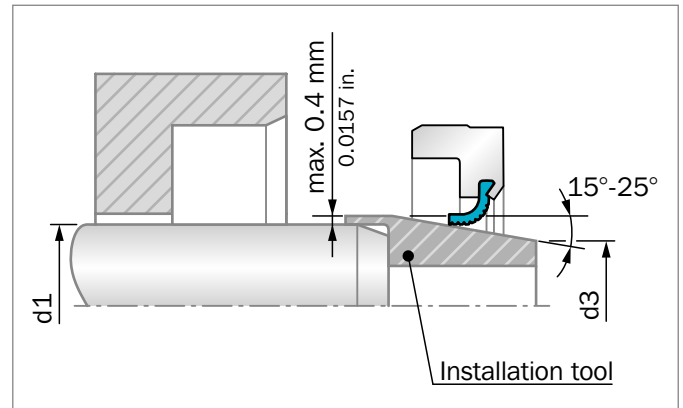


Figure 114: Fitting the sealing lip using an installation tool

Fitting should be performed in a swift movement to limit the time that the lip is formed above shaft size therefore reducing lip recovery time.

## ■ Storage

Turcon® Varilip® PDR do not require any special storage conditions, which unlike elastomer seals must be kept away from sunlight and elevated temperatures to avoid rubber degradation.

Turcon® Varilip® PDR are not subject to shelf life.



## ■ Fitting Instructions

Investigation of premature failures has shown that a significant proportion is a result of inappropriate installation techniques. However, by observing the following guidelines, such failures can be avoided:

- Assembly sleeves and fitting tools should be regularly checked for signs of damage.
- When supplied on mandrels, the seals should not be removed from the mandrel until immediately prior to fitting. Seals supplied on cardboard mandrels should be removed in the direction such that the spiral paper overlay of the mandrel is not lifted.
- Turcon® Varilip® PDR seals should be assembled on to the shaft in an unlubricated (dry) condition to avoid contamination of the hydrodynamic feature (if present).
- Care should be taken not to damage the outer diameter surface of the seal.
- Seals should be pressed squarely into the housing with the pressing-in force applied as close as possible to the outside diameter of the seal.
- If the seal contains a hydrodynamic feature on the sealing lip, ensure that it is correctly oriented in relation to the shaft's direction of rotation.
- Normal practice is to install the seal with the lip facing the media to be sealed (the seal is reversed only when it becomes more important to exclude media than to retain it).
- Proprietary sealants or adhesives may be used for improved sealing of the outer diameter in critical applications or for seal retention purposes.
- Be aware that the extended metal pressure support behind the lip arrangement of the Type C design has a close clearance to the shaft (Figure 117). It is advised that the inside diameter of this support is measured before manufacturing the assembly cone to ensure that there is sufficient clearance.

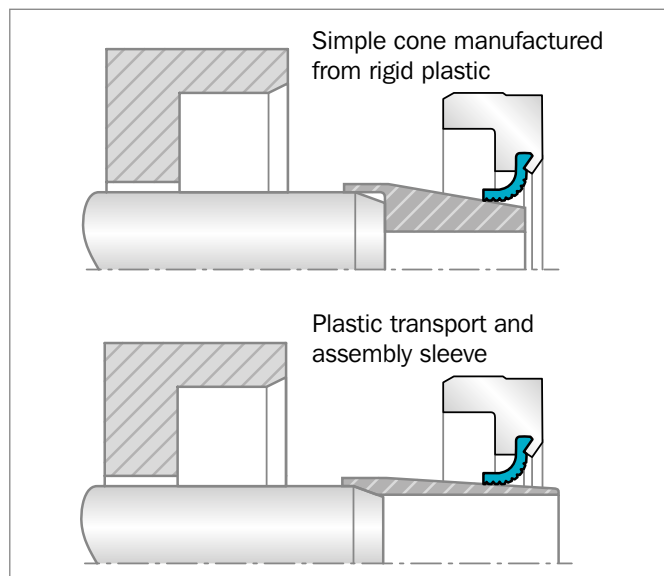


Figure 115: Assembly tooling types for installation on shafts

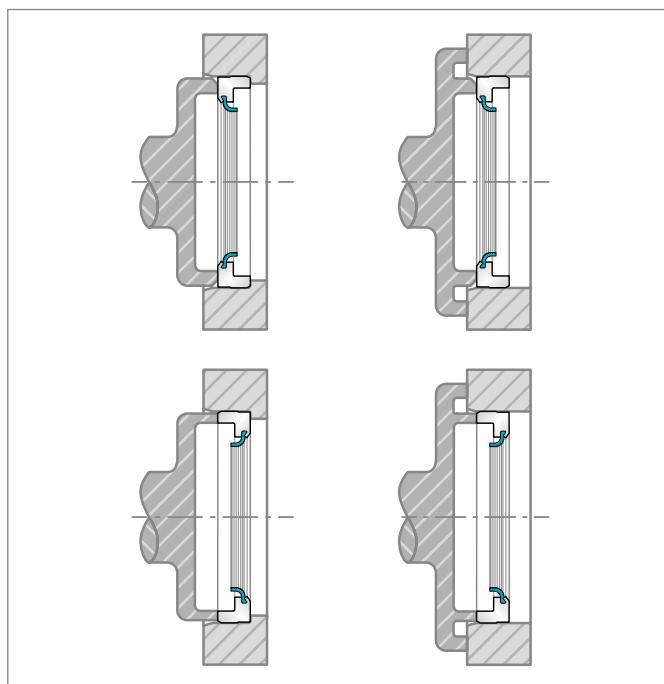


Figure 116: Assembly tooling types for press fit into a housing

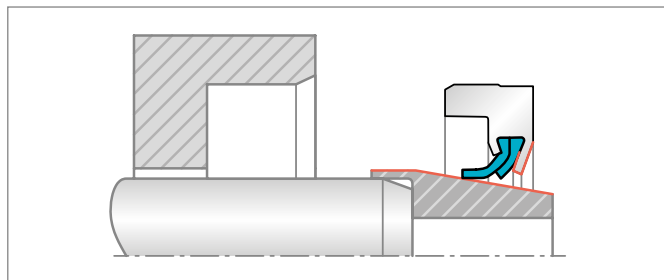


Figure 117: Ensure there is sufficient clearance between the support leg and the assembly cone



## ■ Installation Recommendations

The following diagrams show installation recommendations in respect to seal retention under pressurized conditions.

### POST INSTALLATION RECOMMENDATIONS

If painting the housing after installation, be sure to mask the seal. Avoid getting any paint on the lip or the shaft where the lip rides. Also, mask any vents or drain holes so they will not become clogged. Be sure to remove masks before operating unit.

If paint is to be baked, or the mechanism is otherwise subjected to heat, seals should not be heated to temperatures higher than their materials can tolerate. Contact your local Customer Solution Center for guidance.

When cleaning or testing, do not subject seals to any fluids or pressures other than those for which the seals have been specified.

Extraction features such as tapped holes, internal threads or simple grooves can be included in custom Turcon® Varilip® PDR designs.

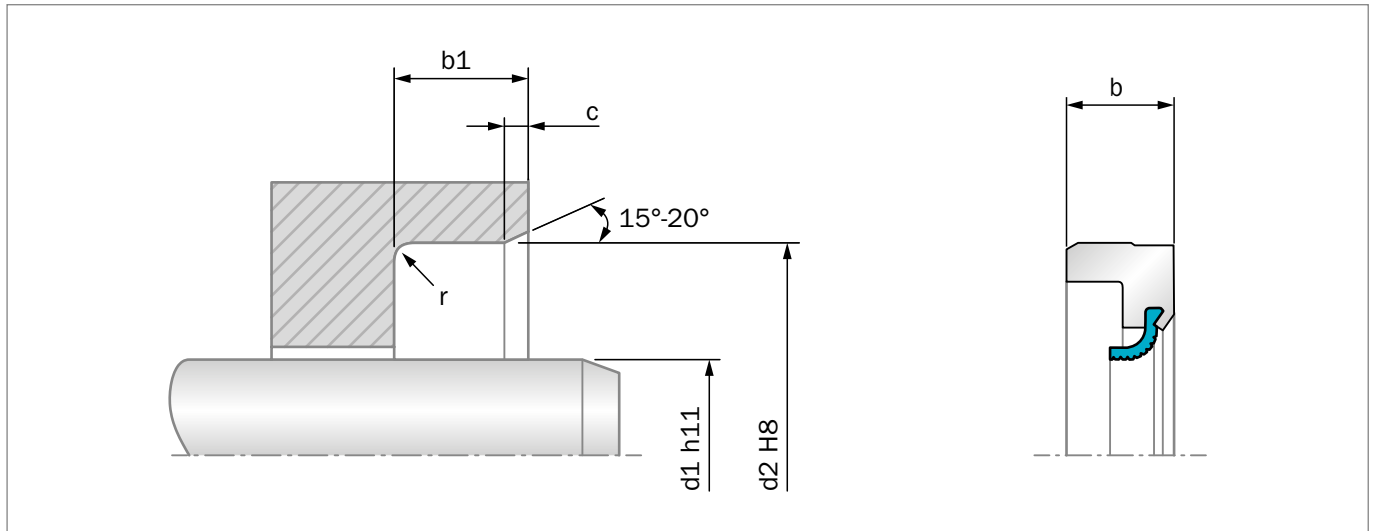


Figure 118: Installation drawing for pressures up to 0.5 MPa (73 psi)

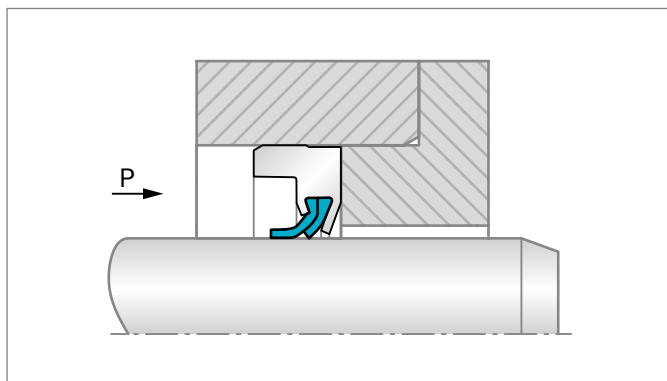


Figure 119: Installation for pressure from 0.5 MPa (73 psi) up to 1 MPa (145 psi). It is recommended to machine the housing to support the back of the seal.


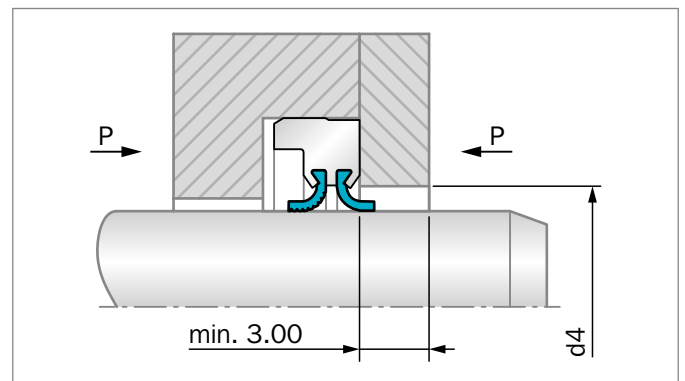


Figure 120: Installation type for fluid separation (Type D) at pressures up to 0.5 MPa (73 psi).

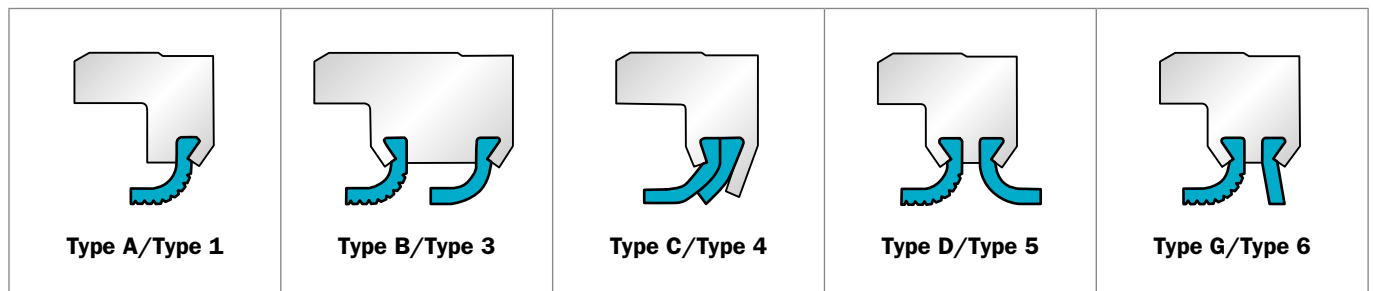

## Turcon® Varilip® PDR Size Ranges



**Table 72: Turcon® Varilip® PDR Metric Size Range**

| Shaft Diameter | Bore Diameter | Seal Length (b) |          | Bore Depth (b1) |          | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|----------|-----------------|----------|--------------------|--------------|
|                |               | exc. TJB (mm)   | TJB (mm) | exc. TJB (mm)   | TJB (mm) |                    |              |
| 6.0            | 16.0          | 7.0             | 10.0     | 7.3             | 10.3     | 9.6                | TJ_1_0060    |
| 6.0            | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 9.6                | TJ_2_0060    |
| 7.0            | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 10.6               | TJ_1_0070    |
| 8.0            | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 11.6               | TJ_1_0080    |
| 8.0            | 24.0          | 7.0             | 10.0     | 7.3             | 10.3     | 11.6               | TJ_2_0080    |
| 9.0            | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 12.6               | TJ_1_0090    |
| 9.0            | 24.0          | 7.0             | 10.0     | 7.3             | 10.3     | 12.6               | TJ_2_0090    |
| 9.0            | 26.0          | 7.0             | 10.0     | 7.3             | 10.3     | 12.6               | TJ_3_0090    |
| 10.0           | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 13.6               | TJ_1_0100    |
| 10.0           | 24.0          | 7.0             | 10.0     | 7.3             | 10.3     | 13.6               | TJ_2_0100    |
| 10.0           | 25.0          | 7.0             | 10.0     | 7.3             | 10.3     | 13.6               | TJ_3_0100    |
| 10.0           | 26.0          | 7.0             | 10.0     | 7.3             | 10.3     | 13.6               | TJ_4_0100    |
| 11.0           | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 14.6               | TJ_1_0110    |
| 11.0           | 26.0          | 7.0             | 10.0     | 7.3             | 10.3     | 14.6               | TJ_2_0110    |
| 12.0           | 22.0          | 7.0             | 10.0     | 7.3             | 10.3     | 15.6               | TJ_1_0120    |
| 12.0           | 24.0          | 7.0             | 10.0     | 7.3             | 10.3     | 15.6               | TJ_2_0120    |
| 12.0           | 25.0          | 7.0             | 10.0     | 7.3             | 10.3     | 15.6               | TJ_3_0120    |
| 12.0           | 28.0          | 7.0             | 10.0     | 7.3             | 10.3     | 15.6               | TJ_4_0120    |
| 12.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 15.6               | TJ_5_0120    |
| 14.0           | 24.0          | 7.0             | 10.0     | 7.3             | 10.3     | 17.6               | TJ_1_0140    |
| 14.0           | 28.0          | 7.0             | 10.0     | 7.3             | 10.3     | 17.6               | TJ_2_0140    |
| 14.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 17.6               | TJ_3_0140    |
| 14.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 17.6               | TJ_4_0140    |
| 15.0           | 26.0          | 7.0             | 10.0     | 7.3             | 10.3     | 18.6               | TJ_1_0150    |
| 15.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 18.6               | TJ_2_0150    |
| 15.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 18.6               | TJ_3_0150    |
| 15.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 18.6               | TJ_4_0150    |

According to ISO 6194/1 and ISO 16589.

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request. (Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |          | Bore Depth (b1) |          | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|----------|-----------------|----------|--------------------|--------------|
|                |               | exc. TJB (mm)   | TJB (mm) | exc. TJB (mm)   | TJB (mm) |                    |              |
| 16.0           | 28.0          | 7.0             | 10.0     | 7.3             | 10.3     | 19.6               | TJ_1_0160    |
| 16.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 19.6               | TJ_2_0160    |
| 16.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 19.6               | TJ_3_0160    |
| 16.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 19.6               | TJ_4_0160    |
| 17.0           | 28.0          | 7.0             | 10.0     | 7.3             | 10.3     | 20.6               | TJ_1_0170    |
| 17.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 20.6               | TJ_2_0170    |
| 17.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 20.6               | TJ_3_0170    |
| 17.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 20.6               | TJ_4_0170    |
| 17.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 20.6               | TJ_5_0170    |
| 18.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 21.6               | TJ_1_0180    |
| 18.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 21.6               | TJ_2_0180    |
| 18.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 21.6               | TJ_3_0180    |
| 18.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 21.6               | TJ_4_0180    |
| 20.0           | 30.0          | 7.0             | 10.0     | 7.3             | 10.3     | 23.6               | TJ_1_0200    |
| 20.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 23.6               | TJ_2_0200    |
| 20.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 23.6               | TJ_3_0200    |
| 20.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 23.6               | TJ_4_0200    |
| 20.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 23.6               | TJ_5_0200    |
| 22.0           | 32.0          | 7.0             | 10.0     | 7.3             | 10.3     | 25.6               | TJ_1_0220    |
| 22.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 25.6               | TJ_2_0220    |
| 22.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 25.6               | TJ_3_0220    |
| 22.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 25.6               | TJ_4_0220    |
| 24.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 27.6               | TJ_1_0240    |
| 24.0           | 37.0          | 7.0             | 10.0     | 7.3             | 10.3     | 27.6               | TJ_2_0240    |
| 24.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 27.6               | TJ_3_0240    |
| 24.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 27.6               | TJ_4_0240    |
| 25.0           | 35.0          | 7.0             | 10.0     | 7.3             | 10.3     | 28.6               | TJ_1_0250    |
| 25.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 28.6               | TJ_2_0250    |
| 25.0           | 42.0          | 7.0             | 10.0     | 7.3             | 10.3     | 28.6               | TJ_3_0250    |
| 25.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 28.6               | TJ_4_0250    |
| 25.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 28.6               | TJ_5_0250    |
| 26.0           | 37.0          | 7.0             | 10.0     | 7.3             | 10.3     | 29.6               | TJ_1_0260    |
| 26.0           | 42.0          | 7.0             | 10.0     | 7.3             | 10.3     | 29.6               | TJ_2_0260    |
| 26.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 29.6               | TJ_3_0260    |
| 28.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 31.6               | TJ_1_0280    |
| 28.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 31.6               | TJ_2_0280    |
| 28.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 31.6               | TJ_3_0280    |
| 30.0           | 40.0          | 7.0             | 10.0     | 7.3             | 10.3     | 33.6               | TJ_1_0300    |

According to ISO 6194/1 and ISO 16589.

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request. (Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |          | Bore Depth (b1) |          | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|----------|-----------------|----------|--------------------|--------------|
| d1 (mm)        | d2 (mm)       | exc. TJB (mm)   | TJB (mm) | exc. TJB (mm)   | TJB (mm) | d4 min. (TJD) (mm) |              |
| 30.0           | 42.0          | 7.0             | 10.0     | 7.3             | 10.3     | 33.6               | TJ_2_0300    |
| 30.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 33.6               | TJ_3_0300    |
| 30.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 33.6               | TJ_4_0300    |
| 30.0           | 62.0          | 7.0             | 10.0     | 7.3             | 10.3     | 33.6               | TJ_5_0300    |
| 32.0           | 45.0          | 7.0             | 10.0     | 7.3             | 10.3     | 35.6               | TJ_1_0320    |
| 32.0           | 45.0          | 8.0             | 10.0     | 8.3             | 10.3     | 35.6               | TJ_2_0320    |
| 32.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 35.6               | TJ_3_0320    |
| 32.0           | 47.0          | 8.0             | 10.0     | 8.3             | 10.3     | 35.6               | TJ_4_0320    |
| 32.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 35.6               | TJ_5_0320    |
| 32.0           | 52.0          | 8.0             | 10.0     | 8.3             | 10.3     | 35.6               | TJ_6_0320    |
| 35.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 38.6               | TJ_1_0350    |
| 35.0           | 50.0          | 7.0             | 10.0     | 7.3             | 10.3     | 38.6               | TJ_2_0350    |
| 35.0           | 50.0          | 8.0             | 10.0     | 8.3             | 10.3     | 38.6               | TJ_3_0350    |
| 35.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 38.6               | TJ_4_0350    |
| 35.0           | 52.0          | 8.0             | 10.0     | 8.3             | 10.3     | 38.6               | TJ_5_0350    |
| 35.0           | 55.0          | 8.0             | 10.0     | 8.3             | 10.3     | 38.6               | TJ_6_0350    |
| 35.0           | 62.0          | 7.0             | 10.0     | 7.3             | 10.3     | 38.6               | TJ_7_0350    |
| 36.0           | 47.0          | 7.0             | 10.0     | 7.3             | 10.3     | 39.6               | TJ_1_0360    |
| 36.0           | 50.0          | 7.0             | 10.0     | 7.3             | 10.3     | 39.6               | TJ_2_0360    |
| 36.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 39.6               | TJ_3_0360    |
| 36.0           | 62.0          | 7.0             | 10.0     | 7.3             | 10.3     | 39.6               | TJ_4_0360    |
| 38.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 41.6               | TJ_1_0380    |
| 38.0           | 55.0          | 7.0             | 10.0     | 7.3             | 10.3     | 41.6               | TJ_2_0380    |
| 38.0           | 55.0          | 8.0             | 10.0     | 8.3             | 10.3     | 41.6               | TJ_3_0380    |
| 38.0           | 58.0          | 8.0             | 10.0     | 8.3             | 10.3     | 41.6               | TJ_4_0380    |
| 38.0           | 62.0          | 7.0             | 10.0     | 7.3             | 10.3     | 41.6               | TJ_5_0380    |
| 38.0           | 62.0          | 8.0             | 10.0     | 8.3             | 10.3     | 41.6               | TJ_6_0380    |
| 40.0           | 52.0          | 7.0             | 10.0     | 7.3             | 10.3     | 43.6               | TJ_1_0400    |
| 40.0           | 55.0          | 7.0             | 10.0     | 7.3             | 10.3     | 43.6               | TJ_2_0400    |
| 40.0           | 55.0          | 8.0             | 10.0     | 8.3             | 10.3     | 43.6               | TJ_3_0400    |
| 40.0           | 62.0          | 7.0             | 10.0     | 7.3             | 10.3     | 43.6               | TJ_4_0400    |
| 40.0           | 62.0          | 8.0             | 10.0     | 8.3             | 10.3     | 43.6               | TJ_5_0400    |
| 40.0           | 72.0          | 7.0             | 10.0     | 7.3             | 10.3     | 43.6               | TJ_6_0400    |
| 42.0           | 55.0          | 8.0             | 10.0     | 8.3             | 10.3     | 45.6               | TJ_1_0420    |
| 42.0           | 62.0          | 8.0             | 10.0     | 8.3             | 10.3     | 45.6               | TJ_2_0420    |
| 42.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 45.6               | TJ_3_0420    |
| 45.0           | 60.0          | 8.0             | 10.0     | 8.3             | 10.3     | 48.6               | TJ_1_0450    |
| 45.0           | 62.0          | 8.0             | 10.0     | 8.3             | 10.3     | 48.6               | TJ_2_0450    |
| 45.0           | 65.0          | 8.0             | 10.0     | 8.3             | 10.3     | 48.6               | TJ_3_0450    |

According to ISO 6194/1 and ISO 16589.

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request. (Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |          | Bore Depth (b1) |          | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|----------|-----------------|----------|--------------------|--------------|
| d1 (mm)        | d2 (mm)       | exc. TJB (mm)   | TJB (mm) | exc. TJB (mm)   | TJB (mm) | d4 min. (TJD) (mm) |              |
| 45.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 48.6               | TJ_4_0450    |
| 48.0           | 62.0          | 8.0             | 10.0     | 8.3             | 10.3     | 51.6               | TJ_1_0480    |
| 48.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 51.6               | TJ_2_0480    |
| 50.0           | 65.0          | 8.0             | 10.0     | 8.3             | 10.3     | 53.6               | TJ_1_0500    |
| 50.0           | 68.0          | 8.0             | 10.0     | 8.3             | 10.3     | 53.6               | TJ_2_0500    |
| 50.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 53.6               | TJ_3_0500    |
| 50.0           | 80.0          | 8.0             | 10.0     | 8.3             | 10.3     | 53.6               | TJ_4_0500    |
| 52.0           | 68.0          | 8.0             | 10.0     | 8.3             | 10.3     | 55.6               | TJ_1_0520    |
| 52.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 55.6               | TJ_2_0520    |
| 55.0           | 70.0          | 8.0             | 10.0     | 8.3             | 10.3     | 58.6               | TJ_1_0550    |
| 55.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 58.6               | TJ_2_0550    |
| 55.0           | 80.0          | 8.0             | 10.0     | 8.3             | 10.3     | 58.6               | TJ_3_0550    |
| 55.0           | 85.0          | 8.0             | 10.0     | 8.3             | 10.3     | 58.6               | TJ_4_0550    |
| 56.0           | 70.0          | 8.0             | 10.0     | 8.3             | 10.3     | 59.6               | TJ_1_0560    |
| 56.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 59.6               | TJ_2_0560    |
| 56.0           | 80.0          | 8.0             | 10.0     | 8.3             | 10.3     | 59.6               | TJ_3_0560    |
| 56.0           | 85.0          | 8.0             | 10.0     | 8.3             | 10.3     | 59.6               | TJ_4_0560    |
| 58.0           | 72.0          | 8.0             | 10.0     | 8.3             | 10.3     | 61.6               | TJ_1_0580    |
| 58.0           | 80.0          | 8.0             | 10.0     | 8.3             | 10.3     | 61.6               | TJ_2_0580    |
| 60.0           | 75.0          | 8.0             | 10.0     | 8.3             | 10.3     | 63.6               | TJ_1_0600    |
| 60.0           | 80.0          | 8.0             | 10.0     | 8.3             | 10.3     | 63.6               | TJ_2_0600    |
| 60.0           | 85.0          | 8.0             | 10.0     | 8.3             | 10.3     | 63.6               | TJ_3_0600    |
| 60.0           | 90.0          | 8.0             | 10.0     | 8.3             | 10.3     | 63.6               | TJ_4_0600    |
| 62.0           | 85.0          | 10.0            | 10.0     | 10.3            | 10.3     | 66.4               | TJ_1_0620    |
| 62.0           | 90.0          | 10.0            | 10.0     | 10.3            | 10.3     | 66.4               | TJ_2_0620    |
| 63.0           | 85.0          | 10.0            | 10.0     | 10.3            | 10.3     | 67.4               | TJ_1_0630    |
| 63.0           | 90.0          | 10.0            | 10.0     | 10.3            | 10.3     | 67.4               | TJ_2_0630    |
| 65.0           | 85.0          | 10.0            | 10.0     | 10.3            | 10.3     | 69.4               | TJ_1_0650    |
| 65.0           | 90.0          | 10.0            | 10.0     | 10.3            | 10.3     | 69.4               | TJ_2_0650    |
| 65.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 69.4               | TJ_3_0650    |
| 68.0           | 90.0          | 10.0            | 10.0     | 10.3            | 10.3     | 72.4               | TJ_1_0680    |
| 68.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 72.4               | TJ_2_0680    |
| 70.0           | 90.0          | 10.0            | 10.0     | 10.3            | 10.3     | 74.4               | TJ_1_0700    |
| 70.0           | 95.0          | 10.0            | 10.0     | 10.3            | 10.3     | 74.4               | TJ_2_0700    |
| 70.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 74.4               | TJ_3_0700    |
| 72.0           | 95.0          | 10.0            | 10.0     | 10.3            | 10.3     | 76.4               | TJ_1_0720    |
| 72.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 76.4               | TJ_2_0720    |
| 75.0           | 95.0          | 10.0            | 10.0     | 10.3            | 10.3     | 79.4               | TJ_1_0750    |
| 75.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 79.4               | TJ_2_0750    |

According to ISO 6194/1 and ISO 16589.

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request. (Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |          | Bore Depth (b1) |          | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|----------|-----------------|----------|--------------------|--------------|
|                |               | exc. TJB (mm)   | TJB (mm) | exc. TJB (mm)   | TJB (mm) |                    |              |
| 78.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 82.4               | TJ_1_0780    |
| 80.0           | 100.0         | 10.0            | 10.0     | 10.3            | 10.3     | 84.4               | TJ_1_0800    |
| 80.0           | 110.0         | 10.0            | 10.0     | 10.3            | 10.3     | 84.4               | TJ_2_0800    |
| 85.0           | 110.0         | 12.0            | 12.0     | 12.3            | 12.3     | 89.4               | TJ_1_0850    |
| 85.0           | 120.0         | 12.0            | 12.0     | 12.3            | 12.3     | 89.4               | TJ_2_0850    |
| 90.0           | 110.0         | 12.0            | 12.0     | 12.3            | 12.3     | 94.4               | TJ_1_0900    |
| 90.0           | 120.0         | 12.0            | 12.0     | 12.3            | 12.3     | 94.4               | TJ_2_0900    |
| 95.0           | 120.0         | 12.0            | 12.0     | 12.3            | 12.3     | 99.4               | TJ_1_0950    |
| 95.0           | 125.0         | 12.0            | 12.0     | 12.3            | 12.3     | 99.4               | TJ_2_0950    |
| 100.0          | 120.0         | 12.0            | 12.0     | 12.3            | 12.3     | 104.4              | TJ_1_1000    |
| 100.0          | 125.0         | 12.0            | 12.0     | 12.3            | 12.3     | 104.4              | TJ_2_1000    |
| 100.0          | 130.0         | 12.0            | 12.0     | 12.3            | 12.3     | 104.4              | TJ_3_1000    |
| 105.0          | 130.0         | 12.0            | 12.0     | 12.3            | 12.3     | 109.4              | TJ_1_1050    |
| 105.0          | 140.0         | 12.0            | 12.0     | 12.3            | 12.3     | 109.4              | TJ_2_1050    |
| 110.0          | 130.0         | 12.0            | 12.0     | 12.3            | 12.3     | 114.4              | TJ_1_1100    |
| 110.0          | 140.0         | 12.0            | 12.0     | 12.3            | 12.3     | 114.4              | TJ_2_1100    |
| 115.0          | 140.0         | 12.0            | 12.0     | 12.3            | 12.3     | 119.4              | TJ_1_1150    |
| 115.0          | 150.0         | 12.0            | 12.0     | 12.3            | 12.3     | 119.4              | TJ_2_1150    |
| 120.0          | 150.0         | 12.0            | 12.0     | 12.3            | 12.3     | 124.4              | TJ_1_1200    |
| 120.0          | 160.0         | 12.0            | 12.0     | 12.3            | 12.3     | 124.4              | TJ_2_1200    |
| 125.0          | 150.0         | 12.0            | 12.0     | 12.3            | 12.3     | 129.4              | TJ_1_1250    |
| 125.0          | 160.0         | 12.0            | 12.0     | 12.3            | 12.3     | 129.4              | TJ_2_1250    |
| 130.0          | 160.0         | 12.0            | 12.0     | 12.3            | 12.3     | 134.4              | TJ_1_1300    |
| 130.0          | 170.0         | 12.0            | 12.0     | 12.3            | 12.3     | 134.4              | TJ_2_1300    |
| 135.0          | 170.0         | 12.0            | 12.0     | 12.3            | 12.3     | 139.4              | TJ_1_1350    |
| 140.0          | 170.0         | 15.0            | 15.0     | 15.3            | 15.3     | 147.0              | TJ_1_1400    |
| 145.0          | 175.0         | 15.0            | 15.0     | 15.3            | 15.3     | 152.0              | TJ_1_1450    |
| 150.0          | 180.0         | 15.0            | 15.0     | 15.3            | 15.3     | 157.0              | TJ_1_1500    |
| 160.0          | 190.0         | 15.0            | 15.0     | 15.3            | 15.3     | 167.0              | TJ_1_1600    |
| 170.0          | 200.0         | 15.0            | 15.0     | 15.3            | 15.3     | 177.0              | TJ_1_1700    |
| 180.0          | 210.0         | 15.0            | 15.0     | 15.3            | 15.3     | 187.0              | TJ_1_1800    |
| 190.0          | 220.0         | 15.0            | 15.0     | 15.3            | 15.3     | 197.0              | TJ_1_1900    |
| 200.0          | 230.0         | 15.0            | 22.0     | 15.3            | 22.3     | 207.0              | TJ_1_2000    |
| 210.0          | 240.0         | 15.0            | 22.0     | 15.3            | 22.3     | 217.0              | TJ_1_2100    |
| 220.0          | 250.0         | 15.0            | 22.0     | 15.3            | 22.3     | 227.0              | TJ_1_2200    |
| 230.0          | 260.0         | 15.0            | 24.0     | 15.3            | 24.3     | 237.0              | TJ_1_2300    |
| 240.0          | 270.0         | 15.0            | 24.0     | 15.3            | 24.3     | 247.0              | TJ_1_2400    |
| 250.0          | 280.0         | 15.0            | 24.0     | 15.3            | 24.3     | 257.0              | TJ_1_2500    |

According to ISO 6194/1 and ISO 16589.

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request. (Note that this will include a tooling charge).

**Table 73: Turcon® Varilip® PDR Inch Size Range**

| Shaft Diameter | Bore Diameter | Seal Length (b) |            | Bore Depth (b1) |            | Retention Diameter | TSS Part No. |
|----------------|---------------|-----------------|------------|-----------------|------------|--------------------|--------------|
|                |               | exc. TJB (inch) | TJB (inch) | exc. TJB (inch) | TJB (inch) |                    |              |
| 0.438          | 0.938         | 0.276           | 0.393      | 0.288           | 0.405      | 0.580              | TJ_E_D407    |
| 0.438          | 1.063         | 0.276           | 0.393      | 0.288           | 0.405      | 0.580              | TJ_F_D507    |
| 0.438          | 1.188         | 0.276           | 0.393      | 0.288           | 0.405      | 0.580              | TJ_G_D607    |
| 0.438          | 1.313         | 0.276           | 0.393      | 0.288           | 0.405      | 0.580              | TJ_H_D707    |
| 0.438          | 1.438         | 0.276           | 0.393      | 0.288           | 0.405      | 0.580              | TJ_J_D807    |
| 0.500          | 1.000         | 0.276           | 0.393      | 0.288           | 0.405      | 0.642              | TJ_E_D408    |
| 0.500          | 1.125         | 0.276           | 0.393      | 0.288           | 0.405      | 0.642              | TJ_F_D508    |
| 0.500          | 1.250         | 0.276           | 0.393      | 0.288           | 0.405      | 0.642              | TJ_G_D608    |
| 0.500          | 1.375         | 0.276           | 0.393      | 0.288           | 0.405      | 0.642              | TJ_H_D708    |
| 0.500          | 1.500         | 0.276           | 0.393      | 0.288           | 0.405      | 0.642              | TJ_J_D808    |
| 0.563          | 1.063         | 0.276           | 0.393      | 0.288           | 0.405      | 0.705              | TJ_E_D409    |
| 0.563          | 1.188         | 0.276           | 0.393      | 0.288           | 0.405      | 0.705              | TJ_F_D509    |
| 0.563          | 1.313         | 0.276           | 0.393      | 0.288           | 0.405      | 0.705              | TJ_G_D609    |
| 0.563          | 1.438         | 0.276           | 0.393      | 0.288           | 0.405      | 0.705              | TJ_H_D709    |
| 0.563          | 1.563         | 0.276           | 0.393      | 0.288           | 0.405      | 0.705              | TJ_J_D809    |
| 0.625          | 1.125         | 0.276           | 0.393      | 0.288           | 0.405      | 0.767              | TJ_E_D410    |
| 0.625          | 1.250         | 0.276           | 0.393      | 0.288           | 0.405      | 0.767              | TJ_F_D510    |
| 0.625          | 1.375         | 0.276           | 0.393      | 0.288           | 0.405      | 0.767              | TJ_G_D610    |
| 0.625          | 1.500         | 0.276           | 0.393      | 0.288           | 0.405      | 0.767              | TJ_H_D710    |
| 0.625          | 1.625         | 0.276           | 0.393      | 0.288           | 0.405      | 0.767              | TJ_J_D810    |
| 0.688          | 1.188         | 0.276           | 0.393      | 0.288           | 0.405      | 0.830              | TJ_E_D411    |
| 0.688          | 1.313         | 0.276           | 0.393      | 0.288           | 0.405      | 0.830              | TJ_F_D511    |
| 0.688          | 1.438         | 0.276           | 0.393      | 0.288           | 0.405      | 0.830              | TJ_G_D611    |
| 0.688          | 1.563         | 0.276           | 0.393      | 0.288           | 0.405      | 0.830              | TJ_H_D711    |
| 0.688          | 1.688         | 0.276           | 0.393      | 0.288           | 0.405      | 0.830              | TJ_J_D811    |
| 0.750          | 1.250         | 0.276           | 0.393      | 0.288           | 0.405      | 0.892              | TJ_E_D412    |
| 0.750          | 1.375         | 0.276           | 0.393      | 0.288           | 0.405      | 0.892              | TJ_F_D512    |
| 0.750          | 1.500         | 0.276           | 0.393      | 0.288           | 0.405      | 0.892              | TJ_G_D612    |
| 0.750          | 1.625         | 0.276           | 0.393      | 0.288           | 0.405      | 0.892              | TJ_H_D712    |
| 0.750          | 1.750         | 0.276           | 0.393      | 0.288           | 0.405      | 0.892              | TJ_J_D812    |
| 0.813          | 1.313         | 0.276           | 0.393      | 0.288           | 0.405      | 0.955              | TJ_E_D413    |
| 0.813          | 1.438         | 0.276           | 0.393      | 0.288           | 0.405      | 0.955              | TJ_F_D513    |
| 0.813          | 1.563         | 0.276           | 0.393      | 0.288           | 0.405      | 0.955              | TJ_G_D613    |
| 0.813          | 1.688         | 0.276           | 0.393      | 0.288           | 0.405      | 0.955              | TJ_H_D713    |
| 0.813          | 1.813         | 0.276           | 0.393      | 0.288           | 0.405      | 0.955              | TJ_J_D813    |
| 0.875          | 1.375         | 0.276           | 0.393      | 0.288           | 0.405      | 1.017              | TJ_E_D414    |
| 0.875          | 1.500         | 0.276           | 0.393      | 0.288           | 0.405      | 1.017              | TJ_F_D514    |
| 0.875          | 1.625         | 0.276           | 0.393      | 0.288           | 0.405      | 1.017              | TJ_G_D614    |

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request.

(Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |            | Bore Depth (b1) |            | Retention Diameter   | TSS Part No. |
|----------------|---------------|-----------------|------------|-----------------|------------|----------------------|--------------|
| d1 (inch)      | d2 (inch)     | exc. TJB (inch) | TJB (inch) | exc. TJB (inch) | TJB (inch) | d4 min. (TJD) (inch) |              |
| 0.875          | 1.750         | 0.276           | 0.393      | 0.288           | 0.405      | 1.017                | TJ_H_D714    |
| 0.875          | 1.875         | 0.276           | 0.393      | 0.288           | 0.405      | 1.017                | TJ_J_D814    |
| 0.938          | 1.438         | 0.276           | 0.393      | 0.288           | 0.405      | 1.080                | TJ_E_D415    |
| 0.938          | 1.563         | 0.276           | 0.393      | 0.288           | 0.405      | 1.080                | TJ_F_D515    |
| 0.938          | 1.688         | 0.276           | 0.393      | 0.288           | 0.405      | 1.080                | TJ_G_D615    |
| 0.938          | 1.813         | 0.276           | 0.393      | 0.288           | 0.405      | 1.080                | TJ_H_D715    |
| 0.938          | 1.938         | 0.276           | 0.393      | 0.288           | 0.405      | 1.080                | TJ_J_D815    |
| 1.000          | 1.500         | 0.276           | 0.393      | 0.288           | 0.405      | 1.142                | TJ_E_D416    |
| 1.000          | 1.625         | 0.276           | 0.393      | 0.288           | 0.405      | 1.142                | TJ_F_D516    |
| 1.000          | 1.750         | 0.276           | 0.393      | 0.288           | 0.405      | 1.142                | TJ_G_D616    |
| 1.000          | 1.875         | 0.276           | 0.393      | 0.288           | 0.405      | 1.142                | TJ_H_D716    |
| 1.000          | 2.000         | 0.276           | 0.393      | 0.288           | 0.405      | 1.142                | TJ_J_D816    |
| 1.125          | 1.625         | 0.276           | 0.393      | 0.288           | 0.405      | 1.267                | TJ_E_D418    |
| 1.125          | 1.750         | 0.276           | 0.393      | 0.288           | 0.405      | 1.267                | TJ_F_D518    |
| 1.125          | 1.875         | 0.276           | 0.393      | 0.288           | 0.405      | 1.267                | TJ_G_D618    |
| 1.125          | 2.000         | 0.276           | 0.393      | 0.288           | 0.405      | 1.267                | TJ_H_D718    |
| 1.125          | 2.125         | 0.276           | 0.393      | 0.288           | 0.405      | 1.267                | TJ_J_D818    |
| 1.250          | 1.750         | 0.276           | 0.393      | 0.288           | 0.405      | 1.392                | TJ_E_D420    |
| 1.250          | 1.875         | 0.276           | 0.393      | 0.288           | 0.405      | 1.392                | TJ_F_D520    |
| 1.250          | 2.000         | 0.276           | 0.393      | 0.288           | 0.405      | 1.392                | TJ_G_D620    |
| 1.250          | 2.125         | 0.276           | 0.393      | 0.288           | 0.405      | 1.392                | TJ_H_D720    |
| 1.250          | 2.250         | 0.276           | 0.393      | 0.288           | 0.405      | 1.392                | TJ_J_D820    |
| 1.375          | 1.875         | 0.276           | 0.393      | 0.288           | 0.405      | 1.517                | TJ_E_D422    |
| 1.375          | 2.000         | 0.276           | 0.393      | 0.288           | 0.405      | 1.517                | TJ_F_D522    |
| 1.375          | 2.125         | 0.276           | 0.393      | 0.288           | 0.405      | 1.517                | TJ_G_D622    |
| 1.375          | 2.250         | 0.276           | 0.393      | 0.288           | 0.405      | 1.517                | TJ_H_D722    |
| 1.375          | 2.375         | 0.276           | 0.393      | 0.288           | 0.405      | 1.517                | TJ_J_D822    |
| 1.500          | 2.000         | 0.276           | 0.393      | 0.288           | 0.405      | 1.642                | TJ_E_D424    |
| 1.500          | 2.125         | 0.276           | 0.393      | 0.288           | 0.405      | 1.642                | TJ_F_D524    |
| 1.500          | 2.250         | 0.276           | 0.393      | 0.288           | 0.405      | 1.642                | TJ_G_D624    |
| 1.500          | 2.375         | 0.276           | 0.393      | 0.288           | 0.405      | 1.642                | TJ_H_D724    |
| 1.500          | 2.500         | 0.276           | 0.393      | 0.288           | 0.405      | 1.642                | TJ_J_D824    |
| 1.625          | 2.125         | 0.276           | 0.393      | 0.288           | 0.405      | 1.767                | TJ_E_D426    |
| 1.625          | 2.250         | 0.276           | 0.393      | 0.288           | 0.405      | 1.767                | TJ_F_D526    |
| 1.625          | 2.375         | 0.276           | 0.393      | 0.288           | 0.405      | 1.767                | TJ_G_D626    |
| 1.625          | 2.500         | 0.276           | 0.393      | 0.288           | 0.405      | 1.767                | TJ_H_D726    |
| 1.625          | 2.625         | 0.276           | 0.393      | 0.288           | 0.405      | 1.767                | TJ_J_D826    |
| 1.750          | 2.250         | 0.276           | 0.393      | 0.288           | 0.405      | 1.892                | TJ_E_D428    |
| 1.750          | 2.375         | 0.276           | 0.393      | 0.288           | 0.405      | 1.892                | TJ_F_D528    |

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request.

(Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |            | Bore Depth (b1) |            | Retention Diameter   | TSS Part No. |
|----------------|---------------|-----------------|------------|-----------------|------------|----------------------|--------------|
| d1 (inch)      | d2 (inch)     | exc. TJB (inch) | TJB (inch) | exc. TJB (inch) | TJB (inch) | d4 min. (TJD) (inch) |              |
| 1.750          | 2.500         | 0.276           | 0.393      | 0.288           | 0.405      | 1.892                | TJ_G_D628    |
| 1.750          | 2.625         | 0.276           | 0.393      | 0.288           | 0.405      | 1.892                | TJ_H_D728    |
| 1.750          | 2.750         | 0.276           | 0.393      | 0.288           | 0.405      | 1.892                | TJ_J_D828    |
| 1.875          | 2.375         | 0.276           | 0.393      | 0.288           | 0.405      | 2.017                | TJ_E_D430    |
| 1.875          | 2.500         | 0.276           | 0.393      | 0.288           | 0.405      | 2.017                | TJ_F_D530    |
| 1.875          | 2.625         | 0.276           | 0.393      | 0.288           | 0.405      | 2.017                | TJ_G_D630    |
| 1.875          | 2.750         | 0.276           | 0.393      | 0.288           | 0.405      | 2.017                | TJ_H_D730    |
| 1.875          | 2.875         | 0.276           | 0.393      | 0.288           | 0.405      | 2.017                | TJ_J_D830    |
| 2.000          | 2.500         | 0.276           | 0.393      | 0.288           | 0.405      | 2.142                | TJ_E_D432    |
| 2.000          | 2.625         | 0.276           | 0.393      | 0.288           | 0.405      | 2.142                | TJ_F_D532    |
| 2.000          | 2.750         | 0.276           | 0.393      | 0.288           | 0.405      | 2.142                | TJ_G_D632    |
| 2.000          | 2.875         | 0.276           | 0.393      | 0.288           | 0.405      | 2.142                | TJ_H_D732    |
| 2.000          | 3.000         | 0.276           | 0.393      | 0.288           | 0.405      | 2.142                | TJ_J_D832    |
| 2.125          | 2.625         | 0.276           | 0.393      | 0.288           | 0.405      | 2.267                | TJ_E_D434    |
| 2.125          | 2.750         | 0.276           | 0.393      | 0.288           | 0.405      | 2.267                | TJ_F_D534    |
| 2.125          | 2.875         | 0.276           | 0.393      | 0.288           | 0.405      | 2.267                | TJ_G_D634    |
| 2.125          | 3.000         | 0.276           | 0.393      | 0.288           | 0.405      | 2.267                | TJ_H_D734    |
| 2.125          | 3.125         | 0.276           | 0.393      | 0.288           | 0.405      | 2.267                | TJ_J_D834    |
| 2.250          | 2.750         | 0.276           | 0.393      | 0.288           | 0.405      | 2.392                | TJ_E_D436    |
| 2.250          | 2.875         | 0.276           | 0.393      | 0.288           | 0.405      | 2.392                | TJ_F_D536    |
| 2.250          | 3.000         | 0.276           | 0.393      | 0.288           | 0.405      | 2.392                | TJ_G_D636    |
| 2.250          | 3.125         | 0.276           | 0.393      | 0.288           | 0.405      | 2.392                | TJ_H_D736    |
| 2.250          | 3.250         | 0.276           | 0.393      | 0.288           | 0.405      | 2.392                | TJ_J_D836    |
| 2.375          | 2.875         | 0.276           | 0.393      | 0.288           | 0.405      | 2.517                | TJ_E_D438    |
| 2.375          | 3.000         | 0.276           | 0.393      | 0.288           | 0.405      | 2.517                | TJ_F_D538    |
| 2.375          | 3.125         | 0.276           | 0.393      | 0.288           | 0.405      | 2.517                | TJ_G_D638    |
| 2.375          | 3.250         | 0.276           | 0.393      | 0.288           | 0.405      | 2.517                | TJ_H_D738    |
| 2.375          | 3.375         | 0.276           | 0.393      | 0.288           | 0.405      | 2.517                | TJ_J_D838    |
| 2.500          | 3.000         | 0.315           | 0.393      | 0.327           | 0.405      | 2.642                | TJ_E_D440    |
| 2.500          | 3.125         | 0.315           | 0.393      | 0.327           | 0.405      | 2.642                | TJ_F_D540    |
| 2.500          | 3.250         | 0.315           | 0.393      | 0.327           | 0.405      | 2.642                | TJ_G_D640    |
| 2.500          | 3.375         | 0.315           | 0.393      | 0.327           | 0.405      | 2.642                | TJ_H_D740    |
| 2.500          | 3.500         | 0.315           | 0.393      | 0.327           | 0.405      | 2.642                | TJ_J_D840    |
| 2.625          | 3.125         | 0.315           | 0.393      | 0.327           | 0.405      | 2.798                | TJ_E_D442    |
| 2.625          | 3.250         | 0.315           | 0.393      | 0.327           | 0.405      | 2.798                | TJ_F_D542    |
| 2.625          | 3.375         | 0.315           | 0.393      | 0.327           | 0.405      | 2.798                | TJ_G_D642    |
| 2.625          | 3.500         | 0.315           | 0.393      | 0.327           | 0.405      | 2.798                | TJ_H_D742    |
| 2.625          | 3.625         | 0.315           | 0.393      | 0.327           | 0.405      | 2.798                | TJ_J_D842    |
| 2.750          | 3.250         | 0.315           | 0.393      | 0.327           | 0.405      | 2.923                | TJ_E_D444    |

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request.

(Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |            | Bore Depth (b1) |            | Retention Diameter   | TSS Part No. |
|----------------|---------------|-----------------|------------|-----------------|------------|----------------------|--------------|
| d1 (inch)      | d2 (inch)     | exc. TJB (inch) | TJB (inch) | exc. TJB (inch) | TJB (inch) | d4 min. (TJD) (inch) |              |
| 2.750          | 3.375         | 0.315           | 0.393      | 0.327           | 0.405      | 2.923                | TJ_F_D544    |
| 2.750          | 3.500         | 0.315           | 0.393      | 0.327           | 0.405      | 2.923                | TJ_G_D644    |
| 2.750          | 3.625         | 0.315           | 0.393      | 0.327           | 0.405      | 2.923                | TJ_H_D744    |
| 2.750          | 3.750         | 0.315           | 0.393      | 0.327           | 0.405      | 2.923                | TJ_J_D844    |
| 2.875          | 3.375         | 0.315           | 0.393      | 0.327           | 0.405      | 3.048                | TJ_E_D446    |
| 2.875          | 3.500         | 0.315           | 0.393      | 0.327           | 0.405      | 3.048                | TJ_F_D546    |
| 2.875          | 3.625         | 0.315           | 0.393      | 0.327           | 0.405      | 3.048                | TJ_G_D646    |
| 2.875          | 3.750         | 0.315           | 0.393      | 0.327           | 0.405      | 3.048                | TJ_H_D746    |
| 2.875          | 3.875         | 0.315           | 0.393      | 0.327           | 0.405      | 3.048                | TJ_J_D846    |
| 3.000          | 3.500         | 0.315           | 0.393      | 0.327           | 0.405      | 3.173                | TJ_E_D448    |
| 3.000          | 3.625         | 0.315           | 0.393      | 0.327           | 0.405      | 3.173                | TJ_F_D548    |
| 3.000          | 3.750         | 0.315           | 0.393      | 0.327           | 0.405      | 3.173                | TJ_G_D648    |
| 3.000          | 3.875         | 0.315           | 0.393      | 0.327           | 0.405      | 3.173                | TJ_H_D748    |
| 3.000          | 4.000         | 0.315           | 0.393      | 0.327           | 0.405      | 3.173                | TJ_J_D848    |
| 3.125          | 3.625         | 0.315           | 0.393      | 0.327           | 0.405      | 3.298                | TJ_E_D450    |
| 3.125          | 3.750         | 0.315           | 0.393      | 0.327           | 0.405      | 3.298                | TJ_F_D550    |
| 3.125          | 3.875         | 0.315           | 0.393      | 0.327           | 0.405      | 3.298                | TJ_G_D650    |
| 3.125          | 4.000         | 0.315           | 0.393      | 0.327           | 0.405      | 3.298                | TJ_H_D750    |
| 3.125          | 4.125         | 0.315           | 0.393      | 0.327           | 0.405      | 3.298                | TJ_J_D850    |
| 3.250          | 3.875         | 0.315           | 0.393      | 0.327           | 0.405      | 3.423                | TJ_F_D552    |
| 3.250          | 4.000         | 0.315           | 0.393      | 0.327           | 0.405      | 3.423                | TJ_G_D652    |
| 3.250          | 4.125         | 0.315           | 0.393      | 0.327           | 0.405      | 3.423                | TJ_H_D752    |
| 3.250          | 4.250         | 0.315           | 0.393      | 0.327           | 0.405      | 3.423                | TJ_J_D852    |
| 3.375          | 4.000         | 0.472           | 0.472      | 0.484           | 0.484      | 3.548                | TJ_F_D554    |
| 3.375          | 4.125         | 0.472           | 0.472      | 0.484           | 0.484      | 3.548                | TJ_G_D654    |
| 3.375          | 4.250         | 0.472           | 0.472      | 0.484           | 0.484      | 3.548                | TJ_H_D754    |
| 3.375          | 4.375         | 0.472           | 0.472      | 0.484           | 0.484      | 3.548                | TJ_J_D854    |
| 3.500          | 4.125         | 0.472           | 0.472      | 0.484           | 0.484      | 3.673                | TJ_F_D556    |
| 3.500          | 4.250         | 0.472           | 0.472      | 0.484           | 0.484      | 3.673                | TJ_G_D656    |
| 3.500          | 4.375         | 0.472           | 0.472      | 0.484           | 0.484      | 3.673                | TJ_H_D756    |
| 3.500          | 4.500         | 0.472           | 0.472      | 0.484           | 0.484      | 3.673                | TJ_J_D856    |
| 3.625          | 4.250         | 0.472           | 0.472      | 0.484           | 0.484      | 3.798                | TJ_F_D558    |
| 3.625          | 4.375         | 0.472           | 0.472      | 0.484           | 0.484      | 3.798                | TJ_G_D658    |
| 3.625          | 4.500         | 0.472           | 0.472      | 0.484           | 0.484      | 3.798                | TJ_H_D758    |
| 3.625          | 4.625         | 0.472           | 0.472      | 0.484           | 0.484      | 3.798                | TJ_J_D858    |
| 3.750          | 4.375         | 0.472           | 0.472      | 0.484           | 0.484      | 3.923                | TJ_F_D560    |
| 3.750          | 4.500         | 0.472           | 0.472      | 0.484           | 0.484      | 3.923                | TJ_G_D660    |
| 3.750          | 4.625         | 0.472           | 0.472      | 0.484           | 0.484      | 3.923                | TJ_H_D760    |
| 3.750          | 4.750         | 0.472           | 0.472      | 0.484           | 0.484      | 3.923                | TJ_J_D860    |

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request.

(Note that this will include a tooling charge).



| Shaft Diameter | Bore Diameter | Seal Length (b) |            | Bore Depth (b1) |            | Retention Diameter   | TSS Part No.              |
|----------------|---------------|-----------------|------------|-----------------|------------|----------------------|---------------------------|
| d1 (inch)      | d2 (inch)     | exc. TJB (inch) | TJB (inch) | exc. TJB (inch) | TJB (inch) | d4 min. (TJD) (inch) |                           |
| 3.875          | 4.500         | 0.472           | 0.472      | 0.484           | 0.484      | 4.048                | <a href="#">TJ_F_D562</a> |
| 3.875          | 4.625         | 0.472           | 0.472      | 0.484           | 0.484      | 4.048                | <a href="#">TJ_G_D662</a> |
| 3.875          | 4.750         | 0.472           | 0.472      | 0.484           | 0.484      | 4.048                | <a href="#">TJ_H_D762</a> |
| 3.875          | 4.875         | 0.472           | 0.472      | 0.484           | 0.484      | 4.048                | <a href="#">TJ_J_D862</a> |
| 4.000          | 4.625         | 0.472           | 0.472      | 0.484           | 0.484      | 4.173                | <a href="#">TJ_F_D564</a> |
| 4.000          | 4.750         | 0.472           | 0.472      | 0.484           | 0.484      | 4.173                | <a href="#">TJ_G_D664</a> |
| 4.000          | 4.875         | 0.472           | 0.472      | 0.484           | 0.484      | 4.173                | <a href="#">TJ_H_D764</a> |
| 4.000          | 5.000         | 0.472           | 0.472      | 0.484           | 0.484      | 4.173                | <a href="#">TJ_J_D864</a> |
| 4.125          | 4.750         | 0.472           | 0.472      | 0.484           | 0.484      | 4.298                | <a href="#">TJ_F_D566</a> |
| 4.125          | 4.875         | 0.472           | 0.472      | 0.484           | 0.484      | 4.298                | <a href="#">TJ_G_D666</a> |
| 4.125          | 5.000         | 0.472           | 0.472      | 0.484           | 0.484      | 4.298                | <a href="#">TJ_H_D766</a> |
| 4.125          | 5.125         | 0.472           | 0.472      | 0.484           | 0.484      | 4.298                | <a href="#">TJ_J_D866</a> |

Sealing lips may, in some cases, protrude beyond the edge of the seal body.

Sizes not stated on these tables are available on request.

(Note that this will include a tooling charge).



## Ordering Information

**Table 74: Part Number System for Metric Turcon® Varilip® PDR**

| Product Code                  | Design Code                                                                                                | Cross-Section                                                                    | Lip Style                                                                                                                       | Size                                                         | Quality Index                            | Sealing Elements Material                                                        | Body Material                                                                                                             | Secondary Element Modifier                                                                                                                                                                 |
|-------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|------------------------------------------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TJ<br>Turcon®<br>Varilip® PDR | <b>A</b><br>Type A<br><b>B</b><br>Type B<br><b>C</b><br>Type C<br><b>D</b><br>Type D<br><b>G</b><br>Type G | <b>1</b><br><b>2</b><br><b>3</b><br><b>4</b><br><b>5</b><br><b>6</b><br><b>7</b> | <b>A</b><br>Anti-clockwise<br><b>B</b><br>Bi-directional<br><b>C</b><br>Clockwise<br><b>S</b><br>Bi-directional concentric slit | <b>xxxx</b><br>Shaft<br>Diameter<br>< 1,000<br>(dia. x 10.0) | -<br>Industrial<br><b>A</b><br>Aerospace | <b>T25</b><br><b>T40</b><br><b>T78</b><br><b>M83</b><br><b>MF5</b><br><b>MF6</b> | <b>1</b><br>304 Stainless<br><b>2</b><br>316 Stainless<br><b>4</b><br>Mild steel<br>(Zinc plated)<br><b>5</b><br>Aluminum | <b>Blank</b><br>Primary and<br>secondary<br>sealing element<br>material per<br>original design<br><br><b>M</b><br>Primary and<br>secondary<br>sealing element<br>materials are<br>the same |

See table of sizes, pages 216 - 220

**TJ** Product Code  
Turcon® Varilip® PDR

**A** Design Code  
Type A

**3** Cross-section  
8.50 mm (OD Ø47.0 mm)  
based on information in Table 72

**B** Lip Style  
Bi-directional

**0300** Size  
0300/10=30 mm

**-** Quality Index  
Industrial

**T25** Material Code  
Turcon® T25

**1** Body Material  
304 Stainless

Secondary Material Modifier  
Standard material configuration

**Table 75: Part Number System for Inch Size Turcon® Varilip® PDR**

| Product Code                  | Design Code                                                                                                | Cross-Section                                                                                                                    | Lip Style                                                                         | Size                                                                                                | Quality Index                            | Sealing Elements Material                                                        | Body Material                                                                                                             | Secondary Element Modifier                                                                                                                                                                 |
|-------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TJ<br>Turcon®<br>Varilip® PDR | <b>1</b><br>Type 1<br><b>3</b><br>Type 3<br><b>4</b><br>Type 4<br><b>5</b><br>Type 5<br><b>6</b><br>Type 6 | <b>E</b><br>0.250 inch<br><b>F</b><br>0.3125 inch<br><b>G</b><br>0.375 inch<br><b>H</b><br>0.4375 inch<br><b>J</b><br>0.500 inch | <b>A</b><br>Anti-clockwise<br><b>B</b><br>Bi-directional<br><b>C</b><br>Clockwise | <b>Dxxx</b><br>Inch Dash #<br><b>xxx</b><br>Shaft<br>Diameter<br>< 10.0 inch<br>(dia. x<br>1,000.0) | -<br>Industrial<br><b>A</b><br>Aerospace | <b>T25</b><br><b>T40</b><br><b>T78</b><br><b>M83</b><br><b>MF5</b><br><b>MF6</b> | <b>1</b><br>304 Stainless<br><b>2</b><br>316 Stainless<br><b>4</b><br>Mild steel<br>(Zinc plated)<br><b>5</b><br>Aluminum | <b>Blank</b><br>Primary and<br>secondary<br>sealing element<br>material per<br>original design<br><br><b>M</b><br>Primary and<br>secondary<br>sealing element<br>materials are<br>the same |

**TJ** Product Code  
Turcon® Varilip® PDR

**1** Design Code  
Type 1

**E** Cross-Section  
6.35 mm (0.250 inch)

**C** Lip Style  
Clockwise

**D430** Size  
1.875 inch based  
on Dash number

**A** Quality Index  
Aerospace

**T25** Material Code  
Turcon® T25

**5** Body Material  
Aluminium

Secondary Material Modifier  
Standard material configuration



## ■ HiSpin® PDR RT

### GENERAL DESCRIPTION

HiSpin® PDR RT is a high performance, bi-directional rotary seal designed to withstand high speeds, particularly in e-Mobility applications. With a machined metal body and high performance Turcon® sealing element, it offers seal integrity whether in dry, moist or lubricated environments. Extensive testing under extreme operating conditions has proven its sealing efficiency at high rotational speeds.

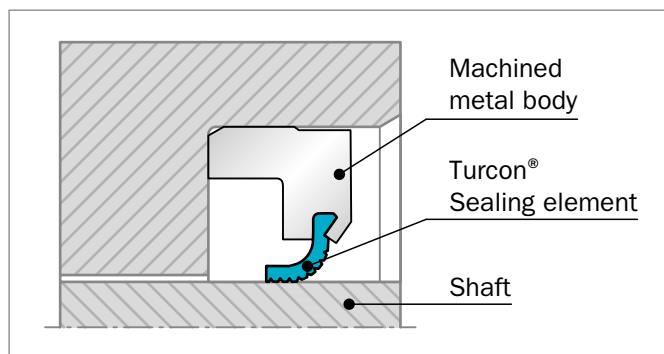


Figure 121: HiSpin® PDR RT

### METHOD OF OPERATION

Developers are continuously improving the effectiveness of the electric drive unit – a combined electric motor and gearbox in a shared housing.

The drive unit is the main cost-driver of future electric vehicle development and offers new challenges for automotive manufacturers. While the gearbox requires efficient lubrication, it is essential that the motor remains dry. Therefore, a highly reliable seal is required between the two parts.

Running in dry, moist or lubricated environments, HiSpin® PDR RT meets ever growing demand for seal integrity at increasingly higher rotational speeds. The seal has excellent sealing characteristics at speeds of up to at least 60 meters per second.

A combination of a unique material, an innovative manufacturing process and specialized sealing lip design, reduces the friction by up to 75 percent when compared to traditional PTFE seals, leading to a significant reduction in power consumption. In addition, heat generation is reduced, as is wear for both the seal itself and its mating surface.

### FEATURES & BENEFITS

- High speed operation (up to 60 m/s and beyond)
- Bi-directional sealing capability
- Compact design to reduce assembly space
- Wide temperature range, from -60 °C to +200 °C
- Capable of operation in low/medium pressure environments
- Excellent sealing performance with and without lubrication
- Extremely low friction and heat development
- Wide media compatibility
- Negligible shaft wear
- Design optimized for durability and long service life
- Provided in accordance with IATF 16949

### APPLICATION EXAMPLES

HiSpin® PDR RT provides optimal sealing in:

- Electric drive units for e-Mobility applications
- High speed electric drive units

### OPERATING CONDITIONS

Seal performance is influenced by factors such as lubrication capability of the sealed media and heat dissipation in the hardware, it follows that testing should always be performed. With good lubrication, the following values can be assumed as a guideline:

|                      |                                           |
|----------------------|-------------------------------------------|
| <b>Pressure:</b>     | dependent upon design and application     |
| <b>Temperature:</b>  | -60 °C to +200 °C                         |
| <b>Speed:</b>        | Up to 60 m/s and beyond                   |
| <b>PV:</b>           | dependent upon design and application     |
| <b>Acceleration:</b> | dependent upon design and application     |
| <b>Media:</b>        | Wide range of commonly used rotary fluids |



## MATING SURFACE MATERIALS

Sealing of applications with rotating movements requires very good mating surfaces. A minimum hardness of 55 HRC to a hardening depth of at least 0.5 mm is recommended – at higher speed and/or pressures, 60 to 64 HRC and a depth of 0.5 to 1.0 mm is recommended.

|                                 |                                                                 |
|---------------------------------|-----------------------------------------------------------------|
| <b>Ra:</b>                      | 0.1 - 0.2 µm                                                    |
| <b>Rz:</b>                      | 1.0 µm                                                          |
| <b>Material ratio Rmr:</b>      | (50 - 70% @ depth of c = 0.25 Rz relative to a ref. line c: 5%) |
| <b>Mating surface hardness:</b> | min. 55 HRC                                                     |

### IMPORTANT NOTE

Housing design and correct installation are important for the performance of the HiSpin® PDR RT. Information on shaft and housing design with installation guides are available from your local Customer Solution Center.

## AGING AND TORQUE

To prove the performance and longevity of HiSpin® PDR RT, testing using real-world speeds and media likely to be encountered during operation has been undertaken. Test conditions are given in Table 76 and the running profile is shown in Figure 122.

**Table 76: Test Conditions for HiSpin® PDR RT**

|                        |                                                 |
|------------------------|-------------------------------------------------|
| <b>Shaft diameter:</b> | Ø 38 mm                                         |
| <b>Shaft speed:</b>    | 21,000 rpm                                      |
| <b>Temperatures:</b>   | up to +150°C                                    |
| <b>Media:</b>          | ATF Fluid                                       |
| <b>Test cycle:</b>     | Load cycle according to Figure 122 and ISO 6149 |
| <b>Test duration:</b>  | 500 hours                                       |



Figure 122: Example running profile showing varying rotational speeds throughout testing

Testing in material development laboratories have repeatedly shown the effectiveness of Turcon® as a sealing material. Experiments show the wide temperature range of Turcon® extends above and below the values for standard elastomer materials (Figure 123). Similarly, when compared with standard Radial Oil Seals, HiSpin® HS40 generates significantly less torque, even at high rotational speeds (Figure 124).

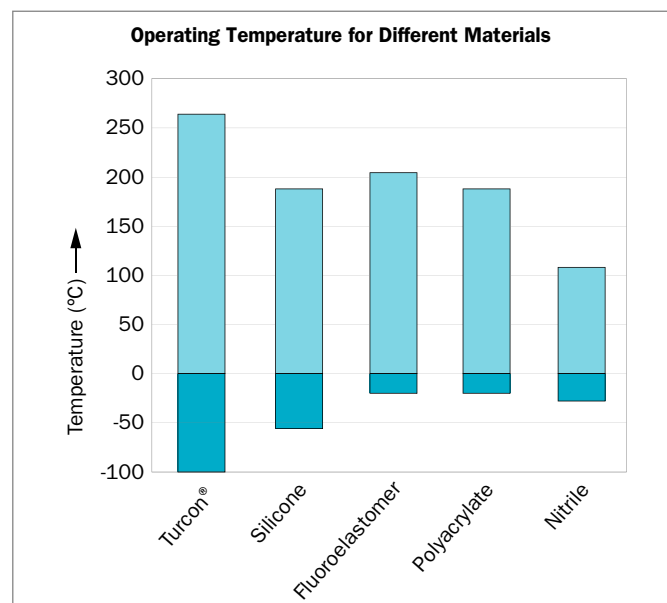


Figure 123: Operating temperatures for Turcon® materials compared with other elastomers

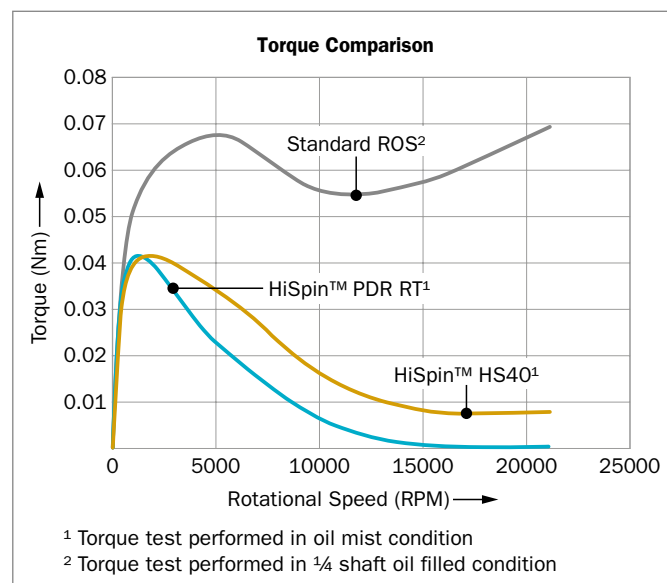


Figure 124: Torque comparison for HiSpin® products versus standard Radial Oil Seals

## ORDERING INFORMATION

Due to the design requirements of this product, contact your local Customer Solution Center to place an order or for further information.