

Turcon® Glyd Ring® Hz



Double-acting

Rubber-energized plastic-faced seal

Material:

Turcon®, Zurcon® and Elastomer



! This page is intentionally left blank.



Turcon® Glyd Ring® Hz



Description

Glyd Ring® Hz is a symmetric single and double acting piston seal particular for applications with short-stroke high-frequency linear movements. It is designed to fit into ISO 7425-1 housing grooves.

Glyd Ring® Hz is wider than Turcon® Glyd Ring® giving a tighter fit in the housing groove and limiting its axial movement. It also prevents the seal from being damaged under short-stroke high-frequency movement. Furthermore it eliminates the risk of wear between O-Ring and seal.

Glyd Ring® Hz has notches on both sides to ensure system pressure instantly can activate the O-Ring under the seal despite the tighter fit and the fast alternation of pressure direction.

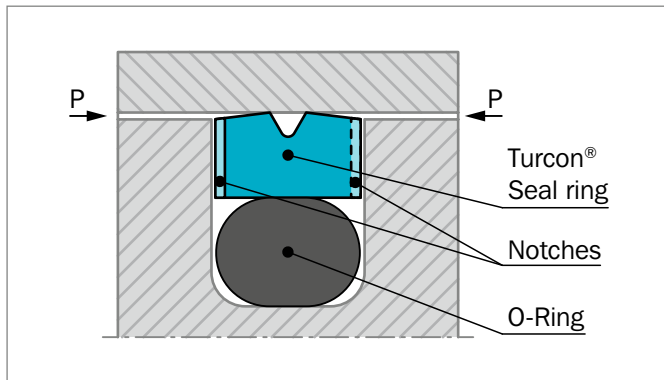


Figure 108: Turcon® Glyd Ring® Hz – short-stroke

The angled contact faces ensure that oil film is not scraped away from the surface but is transported into the groove in the middle of the contact area forming an oil reservoir for lubrication. Wear particles are also likely to be captured in this groove, thus preventing them from embedding in the surface where the highest contact force occurs.

DEFINITION

Short-stroke high-frequency movements are conditions, which in combination can cause problems, in hydraulic systems:

Short-Stroke: $\leq 3 \times G$ (Groove width)

Very short reciprocating movements can cause reduced service life due to insufficient lubrication film, giving an increasing temperature on a limited area. These factors increase wear on seal and hardware and wear particles will not be removed from the seal face.

High-Frequency: Reciprocating movement above 5 Hz.

With an increasing frequency the formation of lubrication under the contact face is reduced. High-frequency is most often occurring in connection with short-strokes. These two types of movements together accelerate the wear on hardware and seal.

ADVANTAGES

- Seal face gets lubricated in short-stroke high-frequency linear movements
- Low friction
- No stick-slip effect
- Single and double acting
- High wear resistance
- Installation grooves acc. to ISO 7425-1
- No adhesive effect to the mating surface during long period of inactivity or storage
- Available for all cylinder diameters up to 999.9 mm. (For diameter $\geq 1,000$ mm TSS special article number is required)

APPLICATION EXAMPLES

Glyd Ring® Hz has been successfully implemented in a large variety of applications as double acting piston seal for hydraulic components such as:

- Injection molding machines
- Machine tools
- Press brakes
- Handling machinery
- Servo equipment
- Pressure intensifiers
- Shock absorbers
- Wind power pitch cylinders



OPERATING CONDITIONS

Pressure:	Up to 30 MPa with mineral oil (depending on seal material)
Speed:	Up to 15 m/s with linear movements
Temperature:	-45 °C to +200 °C* depending on Seal and O-Ring material
Media:	Mineral oil and other fluids with very high lubricity depending on temperature, seal and O-Ring material compatibility
Clearance:	The maximum permissible radial clearance S_{max} is shown in Table 92 as a function of the operating pressure and functional diameter.

IMPORTANT NOTE

The above data are maximum values and cannot be used at the same time, e.g. the maximum operating speed depends on material type, pressure, temperature and gap value. Temperature range also depends on media

* In the case of unpressurized applications in temperatures below 0 °C please contact your local Customer Solution Center for more information!

HARDWARE

Short-stroke high-frequency can cause heavy wear on hardware due to poor lubrication under the seal and the fact that wear products cannot be removed from the contact area. The hardest possible hardware material should be recommended, especially when system pressure is above 10 MPa.

INSTALLATION INSTRUCTIONS

Glyd Ring® Hz is installed according to information on page 247 to 249.

Closed groove installation applies the same limits for cylinder diameter D_N as for Turcon® Glyd Ring® in Table 80 page 249.

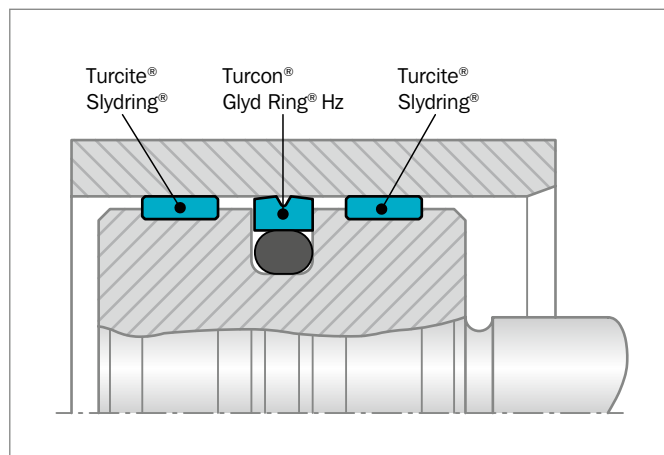


Figure 109: Turcon® Glyd Ring® Hz installed with Turcite® Slydring®

Tandem seal installation of Glyd Ring® Hz cannot be recommended as the short-strokes create a risk of pressure build-up between the seals.

RECOMMENDED MATERIALS

The following material combinations have proven effective for short-stroke and/or high-frequency applications:

Turcon® Glyd Ring® Hz in Turcon® M12

All round material for hydraulic applications with linear, short-stroke and/or high-frequency movements in mineral oils and fluids having high lubricating properties:

O-Ring: NBR 70 Shore A N
 FKM 70 Shore A V
 depending on medium and temperature

Set code: M12N or M12V

Turcon® Glyd Ring® Hz in Turcon® T49

For medium to heavy applications with linear, short-stroke and/or high-frequency movements in mineral oils:

O-Ring: NBR 70 Shore A N
 FKM 70 Shore A V
 depending on medium and temperature

Set code: T49N or T49V

**Turcon® Glyd Ring® Hz in Turcon® T40**

For light to medium applications with linear, short-stroke and/or high-frequency movements in fluids with lower lubricating properties:

O-Ring: NBR 70 Shore A N
 FKM 70 Shore A V
 EPDM, 70 Shore A E
 depending on medium and temperature

Set code: T40N, T40V or T40E

Zurcon® Glyd Ring® Hz in Zurcon® Z80

For light applications with linear, short-stroke and/or high-frequency movements in water based fluids, air and gases at reduced pressure and frequencies due to the temperature limitation of the material:

O-Ring: NBR 70 Shore A N
 EPDM, 70 Shore A E
 depending on medium and temperature

Set code: Z80N or Z80E


Table 91: Turcon® and Zurcon® Materials for Glyd Ring® Hz

Material, Applications, Properties	Code	O-Ring Material Shore A	Code	O-Ring Operating Temp.* °C	Mating Surface Material	MPa max. Dyna- mic
Turcon® M12 First material choice for seals in linear motion with high-frequency and short-strokes For new constructions and updating For commonly applied hydraulic fluids Lowest friction and best sliding properties Lowest wear on seals Improved absorption of abrasive contaminants Low wear or abrasion of counter surface BAM tested Mineral fiber and Additives filled Color: Dark gray	M12	NBR 70	N	-30 to +100	Steel (tubes)	30
		NBR 70 Low temp.	T	-45 to +80	Steel hardened	
		FKM 70	V	-10 to +200	Cast iron Stainless steel Titanium	
Turcon® T40 For lubricating fluids and fluids with lower lubrication performance Water hydraulics at reduced pressure and frequency Surface texture is only suitable for gas sealing when lubricated with fluid Carbon fiber filled Color: Gray	T40	NBR 70	N	-30 to +100	Steel	25
		NBR 70 Low temp.	T	-45 to +80	Steel hardened	
		FKM 70	V	-10 to +200	Cast iron Stainless steel	
		EPDM 70	E**	-45 to +145	Aluminum	
Turcon® T49 For lubricated hydraulics in linear motion High compressive strength High extrusion resistance Very good sliding and wear properties Surface treated for very quick run-in BAM tested Bronze filled Color: Light to dark brown, which may have variations in shading	T49	NBR 70	N	-30 to +100	Steel (tubes)	30
		NBR 70 Low temp.	T	-45 to +80	Steel hardened	
		FKM 70	V	-10 to +200	Cast iron	

Table continues on next page



Material, Applications, Properties	Code	O-Ring Material Shore A	Code	O-Ring Operating Temp.* °C	Mating Surface Material	MPa max. Dyna- mic
Zurcon® Z80 For low frequencies due to the temperature limitation of the material For lubricating fluids and fluids with lower lubrication performance Water based fluids, air and gases at reduced pressure Dry air pneumatics High abrasion and extrusion resistance For service in abrasive conditions and media with particles Good chemical resistance Limited temperature capability (-60 to +80 °C) UHMWPE (Ultra High Molecular Weight Polyethylene) Color: White to off-white	Z80	NBR 70	N	-30 to (+100)	Steel	25
		NBR 70 Low temp.	T	-45 to +80	Steel hardened Stainless steel	
		EPDM 70	E**	-45 to (+145)	Aluminum Ceramic coating	

* The O-Ring Operation Temperature is only valid in mineral hydraulic oil (except EPDM).

** Material not suitable for mineral oils.

BAM: Tested by "Bundesanstalt Materialprüfung, Germany".

 Highlighted materials are recommended.



■ Installation Recommendation

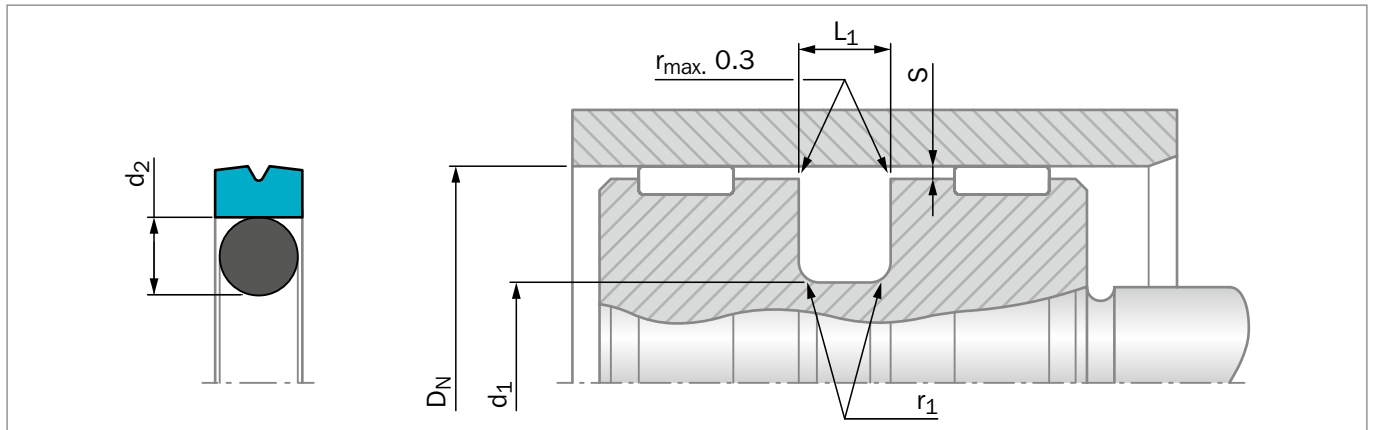


Figure 110: Installation Drawing

Table 92: Installation Dimensions – Standard Recommendations

Series No.	Bore Diameter D_N H9		Groove Diameter	Groove Width	Radius	Radial Clearance S_{max}^*			O-Ring Cross Section
	Standard Application	Available Range	d_1 h9	$L_1 + 0.2$	r_1 max	10 MPa	20 MPa	30 MPa	d_2
PGS0	8 - 14.9	8 - 140.0	$D_N - 5.0^{**}$	2.2	0.4	0.25	0.20	0.15	1.78
PGS1	15 - 39.9	14 - 260.0	$D_N - 7.5$	3.2	0.6	0.40	0.35	0.20	2.62
PGS2	40 - 79.9	22 - 480.0	$D_N - 11.0$	4.2	1.0	0.45	0.40	0.20	3.53
PGS3	80 - 132.9	40 - 750.0	$D_N - 15.5$	6.3	1.3	0.55	0.45	0.25	5.33
PGS4	133 - 329.9	110 - 750.0	$D_N - 21.0$	8.1	1.8	0.60	0.50	0.30	7.00
PGS8***	330 - 669.9	133 - 999.9	$D_N - 24.5$	8.1	1.8	0.60	0.50	0.30	7.00
PGS5***	670 - 999.9	320 - 999.9	$D_N - 28.0$	9.5	2.5	0.65	0.55	0.35	8.40

* At pressures > 30 MPa use diameter tolerance H8/f8 (bore/piston) in the area of the seal or consult your local Customer Solution Center for alternative material or profiles.

Slydring® / Wear Rings are not applicable at very small radial clearances please consult the Slydring® section in this catalog.

** Can also be used in Turcon® Glyd Ring® T groove $D_N - 4.9$ mm.

*** Grooves are not according to ISO 7425-1

ORDERING EXAMPLE

Glyd Ring® Hz complete with O-Ring, standard application:

Series: PGS30 from Table 92

Bore Diameter: $D_N = 80.0$ mm

TSS Part No.: PGS300800 from Table 93

Select the material from Table 91. The corresponding code numbers are appended to the TSS Part No. Together they form the TSS Article Number. The TSS Article No. for all intermediate sizes can be determined by following the example:

TSS Article No. **PGS3 0 0800 - M12 N**

Series No. _____

Type (Standard) _____

Bore Diameter x 10**** _____

Quality Index (Standard) _____

Material Code (Seal Ring) _____

Material Code (O-Ring) _____

**** For diameters $D_N \geq 1,000$ mm only on TSS Special Article Number.

Note:

Installation Dimensions for piston sealing the groove dimensions are identical to Glyd Ring® T and Glyd Ring® PG44.



Table 93: Installation Dimensions / TSS Part No.

Bore	Groove Dia.	Groove Width	Part No.	O-Ring Sizes	Bore	Groove Dia.	Groove Width	Part No.	O-Ring Sizes
D _N H9	d ₁ h9	L ₁ +0.2			D _N H9	d ₁ h9	L ₁ +0.2		
8.0	3.0	2.2	PGS000080	2.57 x 1.78	53.0	42.0	4.2	PGS200530	40.87 x 3.53
10.0	5.0	2.2	PGS000100	4.47 x 1.78	55.0	44.0	4.2	PGS200550	44.04 x 3.53
12.0	7.0	2.2	PGS000120	6.70 x 1.80	57.0	46.0	4.2	PGS200570	44.04 x 3.53
14.0	9.0	2.2	PGS000140	8.75 x 1.80	58.0	47.0	4.2	PGS200580	47.22 x 3.53
15.0	7.5	3.2	PGS100150	6.93 x 2.62	60.0	49.0	4.2	PGS200600	47.22 x 3.53
16.0	11.0	2.2	PGS000160	10.60 x 1.80	62.0	51.0	4.2	PGS200620	50.39 x 3.53
18.0	13.0	2.2	PGS000180	12.42 x 1.78	63.0	52.0	4.2	PGS200630	50.39 x 3.53
18.0	10.5	3.2	PGS100180	9.19 x 2.62	63.0	47.5	6.3	PGS300630	46.99 x 5.33
19.0	11.5	3.2	PGS100190	10.77 x 2.62	65.0	54.0	4.2	PGS200650	53.57 x 3.53
20.0	15.0	2.2	PGS000200	14.00 x 1.78	68.0	57.0	4.2	PGS200680	56.74 x 3.53
20.0	12.5	3.2	PGS100200	12.37 x 2.62	70.0	59.0	4.2	PGS200700	56.74 x 3.53
21.0	13.5	3.2	PGS100210	12.37 x 2.62	70.0	54.5	6.3	PGS300700	53.34 x 5.33
22.0	17.0	2.2	PGS000220	15.60 x 1.78	75.0	64.0	4.2	PGS200750	63.09 x 3.53
22.0	14.5	3.2	PGS100220	13.94 x 2.62	75.0	59.5	6.3	PGS300750	56.52 x 5.33
24.0	16.5	3.2	PGS100240	15.54 x 2.62	80.0	69.0	4.2	PGS200800	66.27 x 3.53
25.0	20.0	2.2	PGS000250	19.00 x 1.80	80.0	64.5	6.3	PGS300800	62.87 x 5.33
25.0	17.5	3.2	PGS100250	17.12 x 2.62	82.5	67.0	6.3	PGS300825	66.04 x 5.33
25.0	14.0	4.2	PGS200250	12.29 x 3.53	85.0	69.5	6.3	PGS300850	66.04 x 5.33
25.4	20.4	2.2	PGS000254	20.35 x 1.78	90.0	79.0	4.2	PGS200900	78.97 x 3.53
28.0	20.5	3.2	PGS100280	20.29 x 2.62	90.0	74.5	6.3	PGS300900	72.39 x 5.33
30.0	22.5	3.2	PGS100300	21.89 x 2.62	95.0	84.0	4.2	PGS200950	82.14 x 3.53
32.0	27.0	2.2	PGS000320	26.70 x 1.78	95.0	79.5	6.3	PGS300950	78.74 x 5.33
32.0	24.5	3.2	PGS100320	23.47 x 2.62	100.0	89.0	4.2	PGS201000	88.49 x 3.53
32.0	21.0	4.2	PGS200320	20.22 x 3.53	100.0	84.5	6.3	PGS301000	81.92 x 5.33
35.0	27.5	3.2	PGS100350	26.64 x 2.62	101.6	86.1	6.3	PGS301016	85.09 x 5.33
35.0	24.0	4.2	PGS200350	23.40 x 3.53	105.0	94.0	4.2	PGS201050	91.67 x 3.53
36.0	28.5	3.2	PGS100360	28.24 x 2.62	105.0	89.5	6.3	PGS301050	88.27 x 5.33
38.0	30.5	3.2	PGS100380	29.82 x 2.62	108.0	92.5	6.3	PGS301080	91.44 x 5.33
40.0	32.5	3.2	PGS100400	31.42 x 2.62	110.0	99.0	4.2	PGS201100	98.02 x 3.53
40.0	29.0	4.2	PGS200400	28.17 x 3.53	110.0	94.5	6.3	PGS301100	91.44 x 5.33
42.0	31.0	4.2	PGS200420	29.75 x 3.53	110.0	89.0	8.1	PGS401100	87.60 x 7.00
44.4	36.9	3.2	PGS100444	36.17 x 2.62	115.0	99.5	6.3	PGS301150	97.79 x 5.33
45.0	34.0	4.2	PGS200450	32.92 x 3.53	120.0	109.0	4.2	PGS201200	107.54 x 3.53
48.0	37.0	4.2	PGS200480	36.09 x 3.53	120.0	104.5	6.3	PGS301200	100.97 x 5.33
50.0	42.5	3.2	PGS100500	40.94 x 2.62	120.0	99.0	8.1	PGS401200	97.60 x 7.00
50.0	39.0	4.2	PGS200500	37.69 x 3.53	125.0	114.0	4.2	PGS201250	110.72 x 3.53
50.0	34.5	6.3	PGS300500	32.69 x 5.33	125.0	109.5	6.3	PGS301250	107.32 x 5.33
50.8	43.3	3.2	PGS100508	42.52 x 2.62	125.0	104.0	8.1	PGS401250	102.60 x 7.00
50.8	39.8	4.2	PGS200508	37.69 x 3.53	127.0	111.5	6.3	PGS301270	110.49 x 5.33
52.0	41.0	4.2	PGS200520	40.87 x 3.53	130.0	114.5	6.3	PGS301300	113.67 x 5.33



Bore	Groove Dia.	Groove Width	Part No.	O-Ring Sizes
D _N H9	d ₁ h9	L ₁ +0.2		
130.0	109.0	8.1	PGS401300	107.60 x 7.00
132.0	121.0	4.2	PGS201320	120.24 x 3.53
135.0	114.0	8.1	PGS401350	113.67 x 7.00
140.0	124.5	6.3	PGS301400	123.19 x 5.33
140.0	119.0	8.1	PGS401400	116.84 x 7.00
145.0	129.5	6.3	PGS301450	126.37 x 5.33
145.0	124.0	8.1	PGS401450	123.19 x 7.00
150.0	134.5	6.3	PGS301500	132.72 x 5.33
150.0	129.0	8.1	PGS401500	126.37 x 7.00
155.0	134.0	8.1	PGS401550	132.72 x 7.00
160.0	144.5	6.3	PGS301600	142.24 x 5.33
160.0	139.0	8.1	PGS401600	135.89 x 7.00
165.0	144.0	8.1	PGS401650	142.24 x 7.00
170.0	149.0	8.1	PGS401700	145.42 x 7.00
175.0	154.0	8.1	PGS401750	151.77 x 7.00
180.0	164.5	6.3	PGS301800	164.47 x 5.33
180.0	159.0	8.1	PGS401800	158.12 x 7.00
190.0	169.0	8.1	PGS401900	164.47 x 7.00
194.0	178.5	6.3	PGS301940	177.17 x 5.33
200.0	184.5	6.3	PGS302000	183.52 x 5.33
200.0	179.0	8.1	PGS402000	177.17 x 7.00
205.0	184.0	8.1	PGS402050	183.52 x 7.00
210.0	189.0	8.1	PGS402100	183.52 x 7.00
215.0	194.0	8.1	PGS402150	189.87 x 7.00
220.0	199.0	8.1	PGS402200	196.22 x 7.00
230.0	214.5	6.3	PGS302300	208.92 x 5.33
230.0	209.0	8.1	PGS402300	202.57 x 7.00
240.0	219.0	8.1	PGS402400	215.27 x 7.00
250.0	234.5	6.3	PGS302500	234.32 x 5.33
250.0	229.0	8.1	PGS402500	227.97 x 7.00
250.0	225.5	8.1	PGS802500	215.27 x 7.00
254.0	233.0	8.1	PGS402540	227.97 x 7.00
260.0	239.0	8.1	PGS402600	240.67 x 7.00
265.0	244.0	8.1	PGS402650	240.67 x 7.00
268.0	247.0	8.1	PGS402680	240.67 x 7.00
270.0	249.0	8.1	PGS402700	240.67 x 7.00

Bore	Groove Dia.	Groove Width	Part No.	O-Ring Sizes
D _N H9	d ₁ h9	L ₁ +0.2		
280.0	259.0	8.1	PGS402800	253.37 x 7.00
290.0	269.0	8.1	PGS402900	266.07 x 7.00
300.0	279.0	8.1	PGS403000	278.77 x 7.00
300.0	275.5	8.1	PGS803000	266.07 x 7.00
304.8	283.8	8.1	PGS403048	278.77 x 7.00
310.0	289.0	8.1	PGS403100	278.77 x 7.00
320.0	299.0	8.1	PGS403200	291.47 x 7.00
320.0	295.5	8.1	PGS803200	291.47 x 7.00
330.0	305.5	8.1	PGS803300	304.17 x 7.00
340.0	315.5	8.1	PGS803400	316.87 x 7.00
350.0	325.5	8.1	PGS803500	316.87 x 7.00
360.0	335.5	8.1	PGS803600	329.57 x 7.00
370.0	345.5	8.1	PGS803700	342.27 x 7.00
380.0	355.5	8.1	PGS803800	354.97 x 7.00
400.0	375.5	8.1	PGS804000	367.67 x 7.00
420.0	395.5	8.1	PGS804200	393.07 x 7.00
430.0	405.5	8.1	PGS804300	405.26 x 7.00
440.0	415.5	8.1	PGS804400	405.26 x 7.00
450.0	425.5	8.1	PGS804500	417.96 x 7.00
460.0	435.5	8.1	PGS804600	430.66 x 7.00
480.0	455.5	8.1	PGS804800	456.06 x 7.00
500.0	475.5	8.1	PGS805000	468.76 x 7.00
555.0	530.5	8.1	PGS805550	532.26 x 7.00
600.0	575.5	8.1	PGS806000	557.66 x 7.00
640.0	615.5	8.1	PGS806400	608.08 x 7.00
660.0	635.5	8.1	PGS806600	633.48 x 7.00
700.0	672.0	9.5	PGS507000	670.30 x 8.40
710.0	682.0	9.5	PGS507100	680.30 x 8.40
740.0	712.0	9.5	PGS507400	710.30 x 8.40
780.0	752.0	9.5	PGS507800	750.30 x 8.40
800.0	772.0	9.5	PGS508000	770.30 x 8.40
900.0	872.0	9.5	PGS509000	870.30 x 8.40

The bore diameters in **bold** type comply with the recommendations of ISO 3320.

Part No. for other dimensions and **all** intermediate dimensions up to 999.9 mm diameter including imperial (inch) dimensions can be supplied.

Larger dimensions up to 2,700 mm are available upon request.